Owner's Manual & Assembly Guide





INNOVATION UNDER COVER®


www.arrowsheds.com

Model No.

ELPHD104

10' x 4

Nominal Size

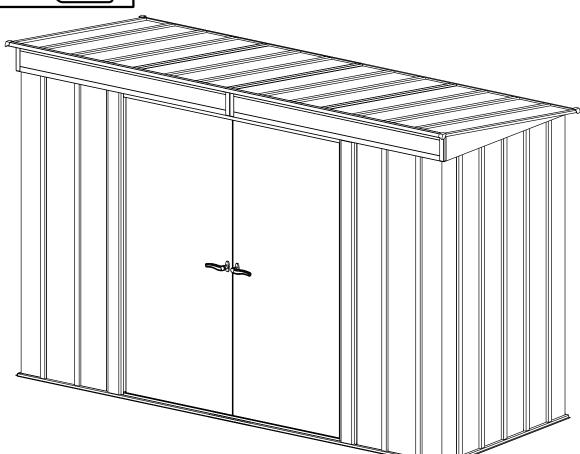

Customer Service:

1-800-851-1085 assist@arrowsheds.com

BUILDING DIMENSIONS

[†]Size rounded off to the nearest foot

121" x 49 1/2" **Base** Size 307,3 cm x 125,7 cm


For proper base construction see page 12

| Approx. [†] | Storage | Exterior Dimensions (Roof Edge to Roof Edge) | | Interior Dimensions (Wall to Wall) | | Door Opening | | | |
|----------------------|---------------------------------------|-------------------------------------------------|----------|---------------------------------------|----------|-----------------|-----------|----------|----------|
| Size | Area | Width | Depth | Height | Width | Depth | Height | Width | Height |
| 10' x 4' | 38 Sq. Ft. 239 Cu. Ft. | 123 1/2" | 51 3/8" | 79" | 118 1/4" | 46 3/4" | 77 13/16" | 59 1/2" | 69" |
| 3,1 m x 1,2 m | 3,6 m ² 6,8 m ³ | 313,7 cm | 130,5 cm | 200,7 cm | 300,4 cm | 118,7 cm | 197,6 cm | 151,1 cm | 175,3 cm |


^{*} See Inside for Detailed Safety Information.

SAFETY PRECAUTIONS...

Safety precautions MUST be followed at all times throughout the construction of your building!

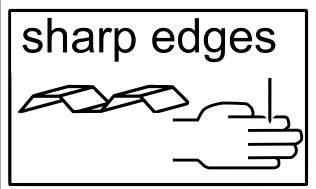


Care must be taken when handling various pieces of your building since many contain sharp edges. Please wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your building.

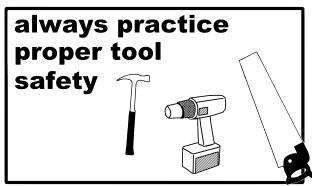

Practice caution with the tools being used in the assembly of this building. Be especially familiar with the operation of all power tools.



Keep children and pets away from the worksite during construction and until the building is completely assembled. This will help avoid distractions and any accidents which may occur.

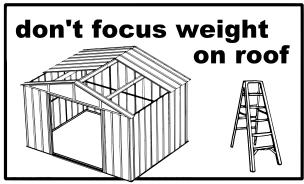

NEVER concentrate your weight on the roof of the building. When using a step ladder make sure that it is fully open and on even ground before climbing on it.



Do NOT attempt to assemble your building on a windy day. The large panels can catch the wind like a "sail", causing them to be whipped around making construction difficult and unsafe.

Do NOT attempt to assemble your building before double checking that you have all the parts indicated on the parts list (page 8) as well as all hardware (page 7). Any building left partially assembled may be seriously damaged by even light winds.

IMPORTANT NOTE ON ANCHORING

- Your building MUST be anchored to prevent wind damage. An anchoring kit is not supplied with your building and you have many options when it comes to anchoring. See anchoring page for more info.
- You must also have a temporary anchoring system in place in case you need to take a break from assembly. See page 4 for more info.

ASSEMBLY TIPS & TOOLS

 
Watch the Weather Closely: Be sure the day you choose to install your building is dry and calm. Do **NOT** attempt to assemble your building on a windy day. Be careful on wet or muddy ground.

Use Teamwork: Two or more people are required to assemble your building. One person can hold the parts or panels in place while the other person fastens them together and handles the tools. This makes the process of assembling your building faster and safer.


Tools and Materials: Here is a list of some basic tools and materials you will need to assemble your building. Decide which method of anchoring and the type of base you will use to make a complete list of the materials you will need.



- Work Gloves
- Safety Glasses
- Step Ladder
- No. 2 Phillips Screwdriver (Magnetic Tip Preferred)
- Utility Knife or Scissors
- Pliers
- Carpenter's Level
- Tape Measure



 - Power Drill (Cordless, Variable Speed)
- Nut Driver or Wrench
- Square
- String (for squaring the frame)
- Awl (to align holes)



- Lumber and/or Concrete
- Hammer and Nails
- Spade or Shovel
- Hand Saw or Power Saw

How to Select and Prepare Your Building Site: Before you start to assemble your building, you will want to decide on a good location. The best location is a level area with good drainage.

- Allow enough working space so it is not difficult to move parts into position for assembly. Be sure there will be enough space at the entrance for the doors to completely open. Also, there needs to be enough space outside the building to be able to fasten the panel screws from the outside.
- Before assembling any parts, your base should be constructed and an anchoring system should be ready to use.

FREQUENTLY ASKED QUESTIONS

Q. How long will it take to assemble the building?

A. Assembly time depends on a variety of factors, including roof design, tools available, DIY skill and the pace at which you work. Guidelines for each shed assembly are approximate AFTER completion of the base, and assume two or more people working on the assembly. Generally, you should plan on at least one day working with someone who can assist you; again, after constructing the base. Refer to the clock icons on each product page on the website for specific time estimates.

Q. How do I decide where to put my shed?

A. The key to a successful assembly is to make sure the shed will be square and level when built. The shed can be assembled directly onto level ground (grass or dirt). If you have location options, choose one that is already flat, with good drainage to control moisture. If you don't have a flat, well-drained area, you need to prepare the space. Level the area using cinder blocks, concrete, crushed gravel or other sturdy materials. Once level with good drainage, construct your base. Using a carpenter's level, make sure your base is level and free of bumps or ridges to provide good support for your building.

Q. What if I can't finish my building in one session?

A. If weather conditions change so that it becomes windy or rainy, it is recommended that you stop assembly until conditions improve. This is for your safety and for protection of the shed panels. However, do not leave your unfinished construction without first temporarily anchoring the corners of the shed to your base and placing weights, such as patio blocks or sandbags, on the floor frame. Failure to anchor the building if you leave it while partially assembled could result in irreparable damage or personal injury if the building collapses.

Note: Most instruction manuals provide a warning note at the beginning of the installation step for corner panels, stating that the remainder of the building assembly requires multiple hours and more than one person. Do not continue beyond this point if you do not have enough time or help to complete the assembly that day. A partially assembled building can be severely damaged by even light winds.

Q. Do I need to anchor my building?

A. Yes! Fully assembled buildings should be anchored using a permanent anchoring system. If you need to leave your building before it is completely assembled, you will need to temporarily anchor the corners of the shed to your base, and place weights, such as patio blocks or sandbags, on top of the floor frame.

Q. How do I temporarily anchor my building before it's fully assembled?

A. An incomplete building must be anchored before breaking for any period of time to prevent possible damage.

- •If the building is on a wood base, secure the frame with wood screws in the corners
- •If the building is on a concrete base, temporarily anchor the frame in the corners
- •Use patio blocks or sandbags on top of the floor frame as weights
- •Secure the floor frame to the ground with ground augers or rope the frame in the corners to the ground

Q. How do I control condensation and prevent water from leaking in?

A. To minimize condensation, install a continuous, unbroken plastic vapor barrier with a thickness of 6 mil. between exposed ground surface and the building's base. Make sure that all weather stripping and washers are used throughout the assembly process. Make sure that the weather-stripping tape adheres to the panels when installing it along the main ridge beam. Do not stretch it. Apply it directly off the roll onto clean panels. Ensure that all washers are flush with the panels and do not over-tighten screws, as this can crack the washers. Silicone caulking may be used to create watertight seals at the washers and throughout the building.

Q. What kind of base do I use?

A. You can:

- •Use an Arrow Base Kit
- •Pour a concrete slab
- Build a wood deck/floor (use exterior-grade plywood)
- Use patio blocks
- •Build on crushed gravel, dirt or grass

Arrow provides a base kit accessory that is an option for most building sizes. If you are building a wood deck/floor, an Arrow floor frame kit on top of your deck/floor assembles in minutes and provides a floor frame suitable for a 5/8" exterior-grade plywood floor (not included). A continuous unbroken plastic vapor barrier with a thickness of 6 mil. between the ground and the building's base is also recommended.

Q. How should I measure for my base?

A. Shed dimensions are provided in "nominal" size. Nominal sizes are roof-edge measurements rounded to the nearest foot and are not the measurements to use for constructing the shed base. So, carefully check the exact, recommended base size in the specifications for your shed model.

Q. How do I align the holes in the wall panels with the holes in the floor frame?

A. Make sure that the shed is level and square, with the correct floor frame size, and that the corner panels are installed correctly. Line up the large hole in the panel with the small holes in the floor frame. An awl can be used to help align the holes.

Q. How do I align the holes in the roof panels with the holes in the roof beam and side wall angles?

A. Your building must be level and square in order for the holes to align. It must be square at both the top and bottom. Check that the building is square by measuring diagonally. The two diagonal measurements will be equal. If your building is out of square, carefully rock and push the shed until it is square. Also, try loosening the roof beams to give more play and flexibility. Non-alignment can also occur if your building is not level. You can raise corners and shim under them to make it level. Check that the panels are installed in the proper location. The building should not be permanently anchored until the complete unit is assembled; otherwise, you will not be able to make adjustments for squareness during assembly. Do not attach the bottom of the roof panels to the side wall angles until all the roof panels are up.

Note: If you have to stop assembly for any reason before it is complete, do not leave your unfinished construction without first temporarily anchoring the corners of the shed to your base and placing weights, such as patio blocks or sandbags, on the floor frame.

Q. How do I ensure that the sliding doors on the building will hang level?


A. Make sure that the door track has been correctly installed, with the long leg on top and the short leg on the bottom. Check that the door slides are straddling the upper and lower legs of the door track assembly, putting the door slide only halfway in the track. Also, the rounded end of the door slide should be at the bottom and the square end at the top.

Q. What kind of customer support is available?

A. Our instruction manuals contain step-by-step assembly illustrations and guide you from preparation through assembly to care and maintenance of your finished building. Each part is marked with a factory number for easy identification. In addition, our assembly animation (located under the Customer Support menu on the website) provides helpful tips. But if you need to reach someone at Arrow, you can contact Arrow Customer Service, toll free, at 1-800-851-1085 (press 1) or via e-mail at assist@arrowsheds.com. Have your model number and instruction manual with you when you call.

- Q. What if the rear wall angle and channels are too large to fit inside of the rear wall panels?
- **A.** Check the dimensions of wall assemblies. They should be slightly smaller than the floor frames. Lay the assemblies on top of the rear floor frame and pull them up to the top of the wall panels causing the corner panels to stand erect and not lean inward. Caution: Be careful to not scratch the panels on the way up.
- **Q.** The wide rib always overlaps the crimped rib. Is there ever an exception?
- **A.** This sequence is to be followed through the assembly process. However, this will typically happen once on the rear and once on each side wall (vertical wall units only) where there will be either two crimped ribs overlapping or two wide ribs overlapping. This may give it a tighter fit, but it will work.
- **Q.** Can the building be painted?
- **A.** The buildings can be painted with an exterior-grade paint designed for use on steel. Contact your local paint supplier for recommendations.
- **Q.** I heard that rust might be an issue with steel; is it?
- **A.** While steel can rust, with proper care this should not be an issue. For a long-lasting finish, periodically clean the exterior surface and apply spray-on car wax. Touch up scratches as soon as you notice them by immediately cleaning the area with a wire brush or emery paper, washing it and applying touch-up paint. This will minimize rust and maintain your shed's attractive appearance for years.
- Q. How do I take care of dents in my shed?
- **A.** Proper selection of shed size, including a sufficient door-opening width, and proper placement of your shed should minimize the possibility of damage. If a dent does occur, carefully push the dent out from the opposite side. If the paint has been scratched or removed, touch up the area as soon as you notice it. Immediately clean the area with a wire brush or emery paper, wash it and apply touch-up paint. This will minimize rust and maintain your shed's attractive appearance for years.

Still have questions? Visit us online at www.arrowsheds.com to view lots of helpful tips and information regarding all of our available products. You can also contact our Customer Service team at 1-800-851-1085 (press 1), or via e-mail at assist@arrowsheds.com.

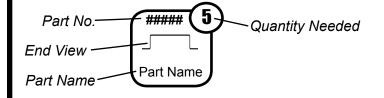

At the top of each page you will see one or more **Part Cues** like the one to the left. These **Part Cues** are designed to help you quickly identify the parts needed for each step.

Confirm that all hardware and parts are present before attempting to assemble your building.

For missing or damaged parts contact Customer Service. Do not return to store.

Customer Service:

1-800-851-1085 or assist@arrowsheds.com

Part Number Part Number

- 1. Each part has an identifying part number on it.
- 2. Part Numbers are referenced in each step.
- 3. Unpainted parts have a stamped in number and painted parts have a number that is inked on.

Remove inked on numbers with soap and water after assembly.

HARDWARE LIST..

| Key No. | Part No. | Part Description | Qty. | √ List |
|------------|-------------|-------------------------------------------------|------|------------------|
| 1 | 65103 | Hex Nut (#8-32) | 96 | |
| 2 | 65923-33 | Small Bolt (Sand) (#8-32 x 3/8) (10 mm) | 60 | |
| 3 | 65923-32 | Small Bolt (Meadow Green) (#8-32 x 3/8) (10 mm) | 4 | |
| 4 | 65004-33 | Small Screw (Sand) (#8AB x 5/16) (8 mm) | 290 | |
| 5 | 65004-32 | Small Screw (Meadow Green) (#8AB x 5/16) (8 mm) | 26 | |
| 6 | 66783 | Flat Head Bolt (#8-32 X 1/2) (13 mm) | 24 | |
| 7 | 65958-32 | Long Bolt (Meadow Green) (#8-32 x 7/8) (22 mm) | 12 | |
| 8 | 66692 | Tapping Screw (#10ABx1) (25 mm) | 2 | |
| 9 | 66810 | Left Handle | 1 | |
| 10 | 66809 | Locking Handle Right | 1 | |
| 11 | 66054 | Latch | 1 | |
| 12 | 66609 | Hinge | 4 | |
| 13 | 66183L | Left Roof Trim Cap | 2 | |
| 14 | 66183R | Right Roof Trim Cap | 2 | |
| 15 | 67236 | Adhesive Pads (2 per sheet) | 1 | |
| 16 | 66684 | Top Latch Spring | 1 | |
| 17 | 66808 | Bottom Latch Spring | 1 | |
| 18 | 66646 | Washer Sheet | 8 | |


Various fasteners are used throughout the construction of your storage unit. In each step you will see the abbreviations listed below used in the illustrations to help you identify which fastener to use.

The fasteners used in each step are shown actual size at the top of each page. If you are unsure which fastener to use, hold it up to the picture and use the one that matches.

SB -Sand Bolt SS -Sand Screw Flat Head Bolt **LNB** - Long Bolt


MGB -Meadow Green Bolt MGS -Meadow Green Screw

Tapping Screw

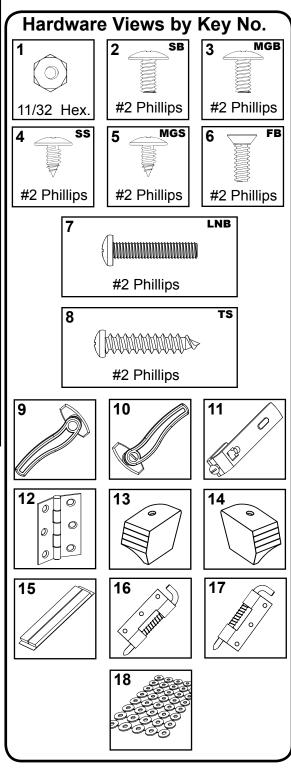


PARTS LIST...


| No. Description List 1 10703 Front/Rear Floor Frame 4 2 10850 Side Floor Frame 2 3 10702 Ramp 1 4 10701 Corner Panel 4 5 10699 Front Wall Panel 2 6 5210 Wall Panel 4 7 10836 Wall Panel 4 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 | Key | Part | Part | Qty. | √ |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|-------|----------------------------|------|----------|
| 2 10850 Side Floor Frame 2 3 10702 Ramp 1 4 10701 Corner Panel 4 5 10699 Front Wall Panel 2 6 5210 Wall Panel 4 7 10836 Wall Panel 4 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Windo | | | • | | List |
| 4 10701 Corner Panel 4 5 10699 Front Wall Panel 2 6 5210 Wall Panel 4 7 10836 Wall Panel 4 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10871 Window Upright Outer 4 25 66838< | | | | | |
| 4 10701 Corner Panel 4 5 10699 Front Wall Panel 2 6 5210 Wall Panel 4 7 10836 Wall Panel 4 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10871 Window Upright Outer 4 25 66838< | 2 | | Side Floor Frame | | |
| 5 10699 Front Wall Panel 2 6 5210 Wall Panel 4 7 10836 Wall Panel 4 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 | 3 | | • | | |
| 6 5210 Wall Panel 4 7 10836 Wall Panel 4 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Header Upper 2 27 | | 10701 | Corner Panel | | |
| 7 10836 Wall Panel 4 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Support Angle Upper 2 27 10870 Window Header Upper 2 <tr< td=""><td></td><td>10699</td><td>Front Wall Panel</td><td></td><td></td></tr<> | | 10699 | Front Wall Panel | | |
| 8 10716 Right Door Jamb 1 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 | | 5210 | | | |
| 9 80057 Left Door Jamb 1 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 | | 10836 | Wall Panel | | |
| 10 10709 Front Wall Channel 2 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window 2 25 66838 Window 2 26 10873 Window Header Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29< | | 10716 | Right Door Jamb | | |
| 11 9917 Rear Wall Channel 2 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Header Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 < | | 80057 | Left Door Jamb | | |
| 12 10854 Side Wall Channel 2 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 1 30 80083 Left Roof Panel 1 | 10 | 10709 | Front Wall Channel | | |
| 13 5986 Rear Wall Angle 2 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 | 11 | 9917 | Rear Wall Channel | 2 | |
| 14 10852 Side Wall Angle 2 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 | 12 | 10854 | Side Wall Channel | 2 | |
| 15 10708 Front Outer Header 2 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 1 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 </td <td>13</td> <td>5986</td> <td>Rear Wall Angle</td> <td>2</td> <td></td> | 13 | 5986 | Rear Wall Angle | 2 | |
| 16 10707 Front Inner Header 1 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 1 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door | 14 | 10852 | Side Wall Angle | 2 | |
| 17 7906 Right Gable 1 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 1 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 15 | 10708 | Front Outer Header | 2 | |
| 18 7907 Left Gable 1 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 16 | 10707 | Front Inner Header | 1 | |
| 19 69836 Edge Trim (Purple) 2 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 17 | 7906 | Right Gable | 1 | |
| 20 7916 Gable Brace 2 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 18 | 7907 | Left Gable | 1 | |
| 21 10874 Roof Beam 2 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 19 | 69836 | Edge Trim (Purple) | 2 | |
| 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 20 | 7916 | Gable Brace | 2 | |
| 22 10869 Window Header Lower 2 23 10871 Window Support Angle Lower 2 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 21 | 10874 | Roof Beam | 2 | |
| 24 10845 Window Upright Outer 4 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 22 | 10869 | Window Header Lower | 2 | |
| 25 66838 Window 2 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 23 | 10871 | Window Support Angle Lower | 2 | |
| 26 10873 Window Support Angle Upper 2 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 24 | 10845 | Window Upright Outer | 4 | |
| 27 10870 Window Header Upper 2 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 25 | 66838 | Window | 2 | |
| 28 10840 Right Roof Panel 1 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 26 | 10873 | Window Support Angle Upper | 2 | |
| 29 10868 Roof Panel 4 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 27 | 10870 | Window Header Upper | 2 | |
| 30 80083 Left Roof Panel 1 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 28 | 10840 | Right Roof Panel | 1 | |
| 31 80087 Left Side Roof Trim 2 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 29 | 10868 | Roof Panel | 4 | |
| 32 10872 Right Side Roof Trim 2 33 10856 Door 2 | 30 | 80083 | Left Roof Panel | 1 | |
| 32 10872 Right Side Roof Trim 2 33 10856 Door 2 34 10719 Door Handle Brace 2 | 31 | 80087 | Left Side Roof Trim | 2 | |
| 33 10856 Door 2 2 34 10719 Door Handle Brace 2 | 32 | 10872 | Right Side Roof Trim | | |
| 34 10719 Door Handle Brace 2 | 33 | 10856 | _ | 2 | |
| | 34 | 10719 | Door Handle Brace | 2 | |
| 35 10718 Horizontal Door Brace 4 | 35 | 10718 | Horizontal Door Brace | | |
| 36 10720 Diagonal Door Brace 8 | | 10720 | Diagonal Door Brace | 8 | |
| 37 10721 Door Stop 1 | 37 | 10721 | • | 1 | |

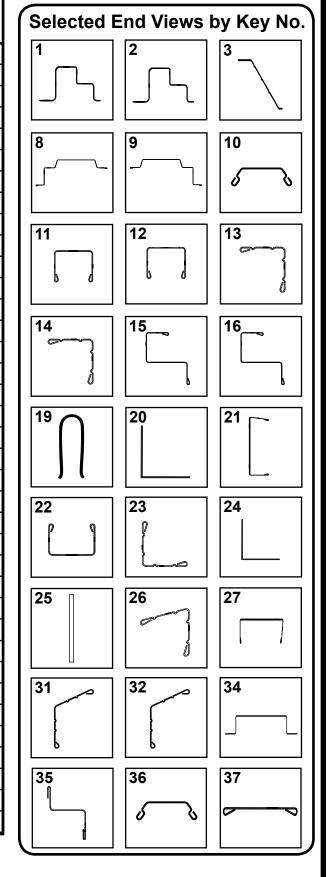


ASSEMBLY BY KEY NO.

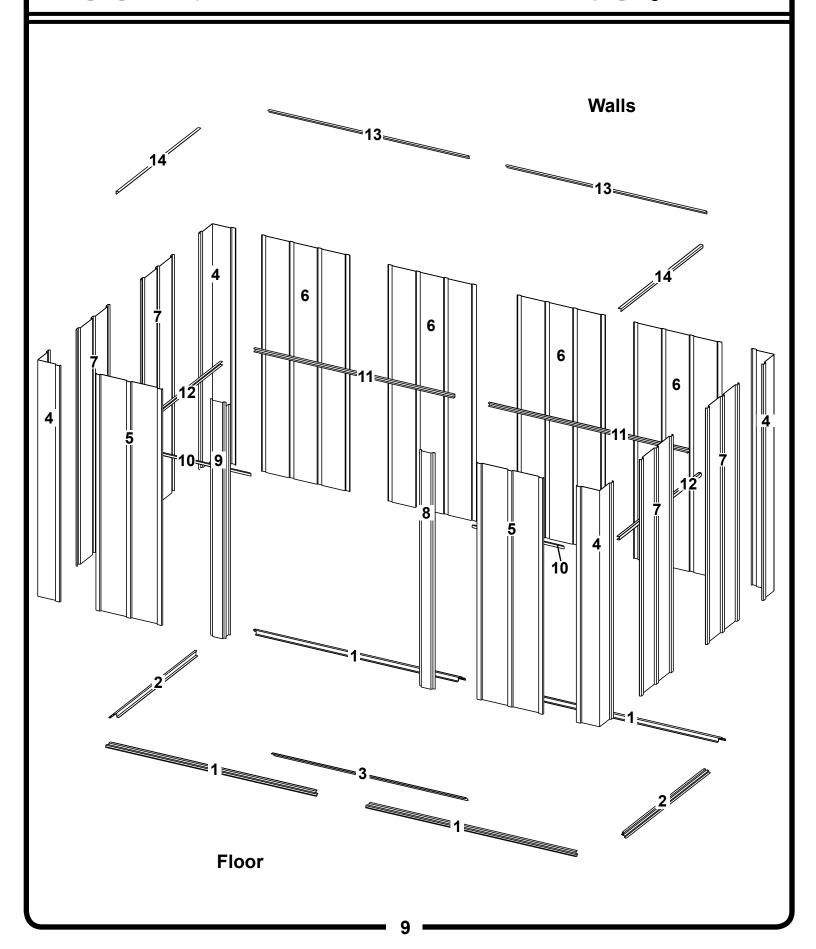


ASSEMBLY BY KEY NO.

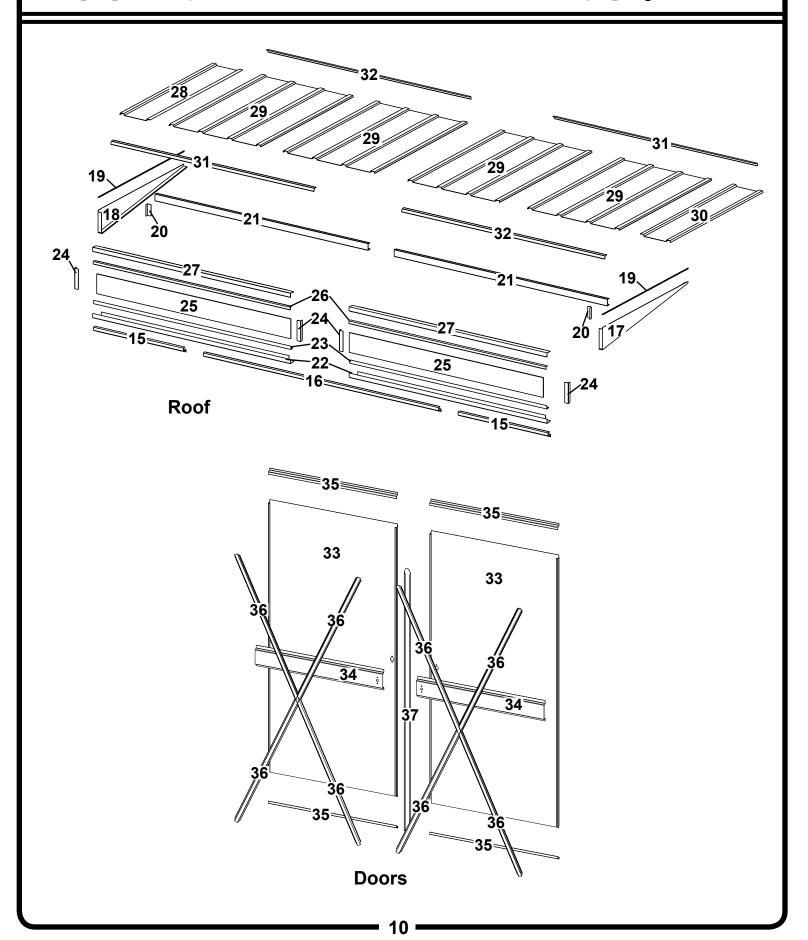


ASSEMBLY OVERVIEW

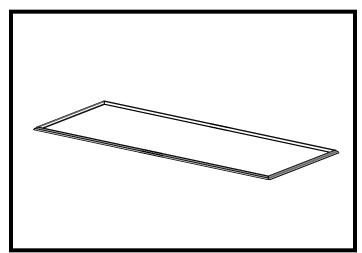


Build the Floor Frame

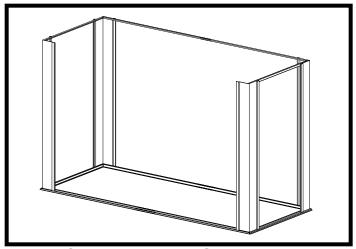


Install Corner Panels, Side Angles, Rear Angles, and Door Jambs

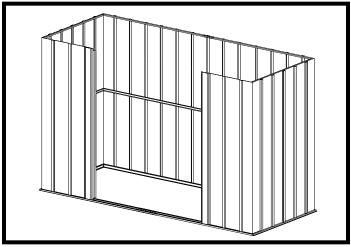


Install Wall Panels and Wall Channels

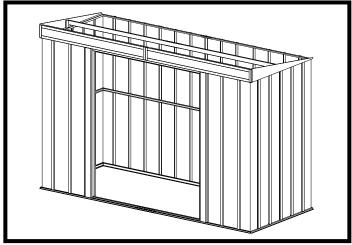

Attach Header, Gables, and Roof Beam

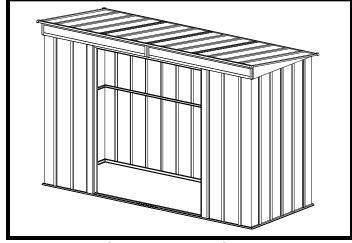

Install Roof Panel, Roof Trim, and Corner Cap

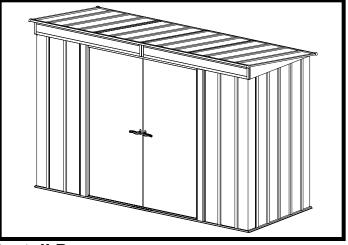

Install Doors

Shed is now complete.

CONSTRUCTING A BASE...

No matter which of the options below you choose for a base, an ARROW ANCHORING KIT is recommended as an effective method of properly securing your building after assembly is complete.

OPTION 1: Directly on ground (earth)

Assemble your building directly on level ground (grass, dirt, rock, sand, etc.).

Allow 1 - 2 hours for construction.

OPTION 2: Wood Platform

If you decide to build your own base, be sure to select the appropriate materials.

These are the recommended materials for your base:

- 2 x 4's (38 mm x 89 mm) Pressure Treated Lumber 5/8" (15,5 mm) 4 x 8 (1220 mm x 2440 mm) Plywood-exterior grade
- 10 & 4 penny Galvanized Nails Concrete Blocks (optional)

NOTE: Pressure Treated Lumber <u>must not be used</u> where it will make contact with your storage building. The properties of Pressure Treated Lumber will cause accelerated corrosion. **If Pressure Treated Lumber comes in contact with your storage building your warranty will be voided.**

The platform should be level and flat (free of bumps, ridges etc.) to provide good support for the building. The necessary materials may be obtained from your local lumber yard.

To construct the base follow instructions and diagram.

Construct frame (using 10 penny galvanized nails) Measure 16"/24" (40,6 cm/61,0 cm) sections to construct inside frame (see diagram)

Secure plywood to frame (using 4 penny galvanized nails)

Allow 6 - 7 hours for construction.

OPTION 3: Concrete Slab


The slab should be at least 4" (10,2 cm) thick. It must be level and flat to provide good support for the frame.

The following are the recommended materials for your base.


- 1 x 4's (19 mm x 89 mm) (will be removed once the concrete cures)
- · Concrete · Sheet of 6 mil plastic
- We recommend for a proper strength concrete to use a mix of:
- 1 part cement 3 parts pea sized gravel 2 1/2 parts clean sand

Prepare the Site/Construct a Base

- 1. Dig a square, 6" (15,2 cm) deep into the ground (remove grass).
- 2. Fill up to 4" (10,2 cm) in the square with gravel and tamp firm.
- 3. Cover gravel with a sheet of 6 mil plastic.
- 4. Construct a wood frame using four planks of 1x4 (19 mm x 89 mm) lumber.
- 5. Pour in concrete to fill in the hole and the frame giving a total of 4" (10,2 cm) thick concrete. Be sure surface is level.

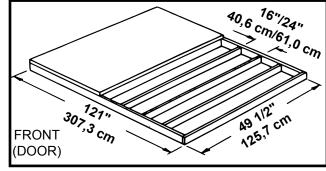

Note: Platform/Slab will extend 9/16" (1,4 cm) beyond floor frame on all four sides. Seal this 9/16" (1,4 cm) of wood with a roofing cement (not included), or bevel this 9/16" (1,4 cm) of concrete when pouring, for good water drainage.

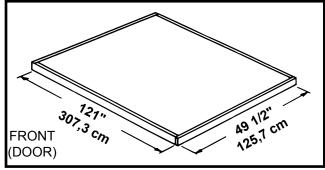


Note: Finished Slab dimensions, with lumber removed.

Allow 3 - 5 hours for construction and a week for concrete curing time.

Step 1: Floor Frames

 You will need for this page:







NOTE Washers are to be used on painted parts only. Washers are not necessary on unpainted parts and there are not enough to use on every screw and bolt.

10703

Overlap two (2) Front/Rear Floor Frames as shown and secure with four (4) Sand Bolts and Nuts. Two (2) Sand Bolts and Nuts must enter from bottom.

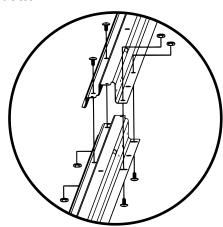

BUILD TWO (2) FRAMES

 


Bolts thru Top. Bolts thru Bottom.

> Overlap Length 11 7/8" (30,2 cm)


10703

Assembly repeating Step Check by 1. that the finished length of the assemblies is 119 3/8" (303,2 cm). Set aside for use in Step 8.

 
Assemble a second Front/Rear Floor Frame




Step 2: Wall Frames

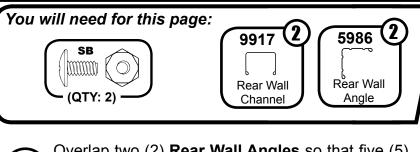


Overlap two (2) **Rear Wall Angles** so that five (5) holes align as shown. Insert one (1) **Sand Bolt** and **Nut** through the center hole. Set aside for use in Step 10.

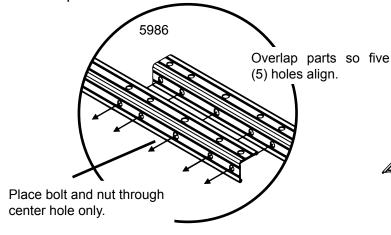


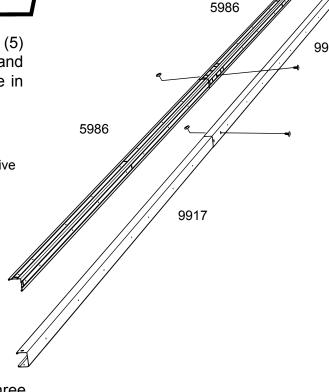

Overlap two (2) **Rear Wall Channels** so that three (3) holes align as shown. Insert one (1) **Sand Bolt** and **Nut** through the center hole. Set aside for use in Step 13.

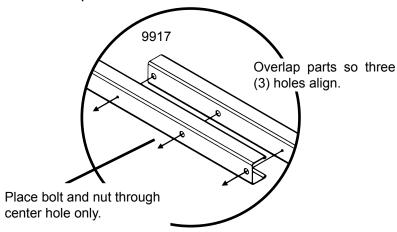


Check that the finished length of the assemblies is 118 1/8" (300,0 cm).

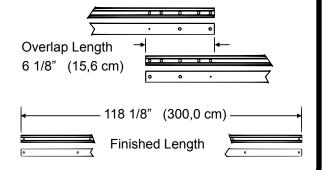


Step 3: Header

 
(QTY:2)




Header

Header

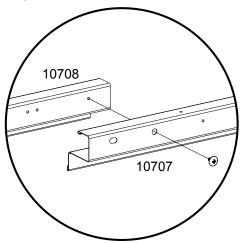


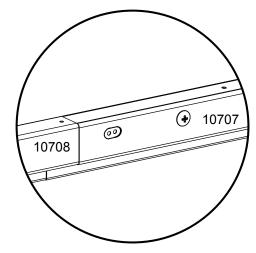

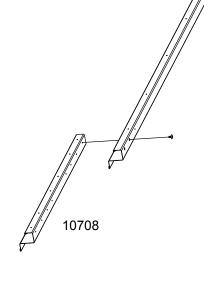



10707


Check that the finished length of the assembly is 118 1/8" (300,0 cm).

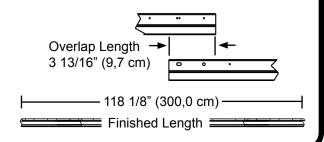

   Step 4: Roof Beams










Overlap two (2) **Roof Beams** so that the bottom slots align as shown. Insert six (6) **Sand Bolts** and **Nuts** as shown below.

Overlap parts so the bottom slots align.

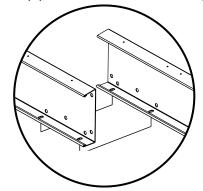

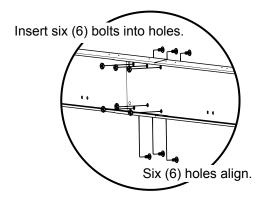


10874

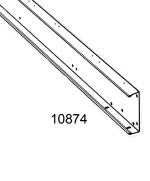


Insert two (2) **Sand Bolts** and **Nuts** into slots on bottom of the **Beam** as shown. Set aside for use in Step 15.

Insert bolts into slots from bottom.

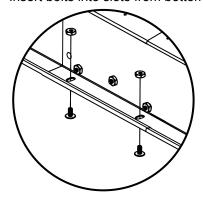


Overlap Length 9" (22,9 cm)

 
Check that the finished length of the assembly is 120 1/8" (305,1 cm).



Step 5: Door Pre-Assembly

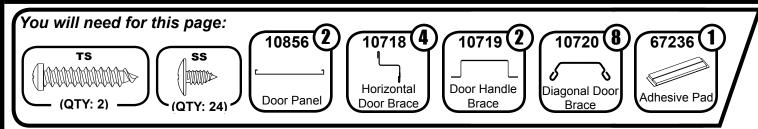


- Start assembly by sliding the Door Handle Brace into the middle of the Door and securing it with four (4) Sand Screws. Then attach the Horizontal Door Braces to each end of Door using two (2) Sand Screws on each brace. Once installed, attach Adhesive Pad between leg of Door Handle Brace and Door.
- Place the ends of Diagonal Door Braces with small holes under Horizontal Door Braces as shown. Secure all Diagonal Door Braces to center of Door Handle Brace using one (1) Tapping Screw. Attach all Diagonal Door Braces under Horizontal Door Braces using four (4) Sand Screws at each corner as shown.

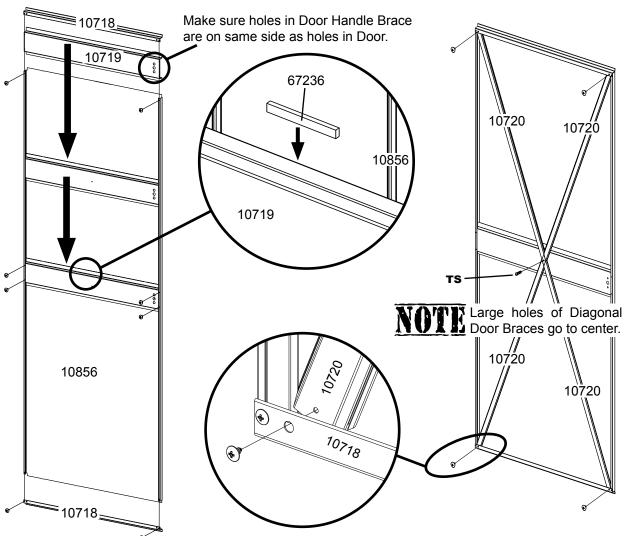

(3) Repeat this process for the other **Door**.


Diagonal Door Braces attach from behind Horizontal Door Brace.

Step 6: Right Door Assembly

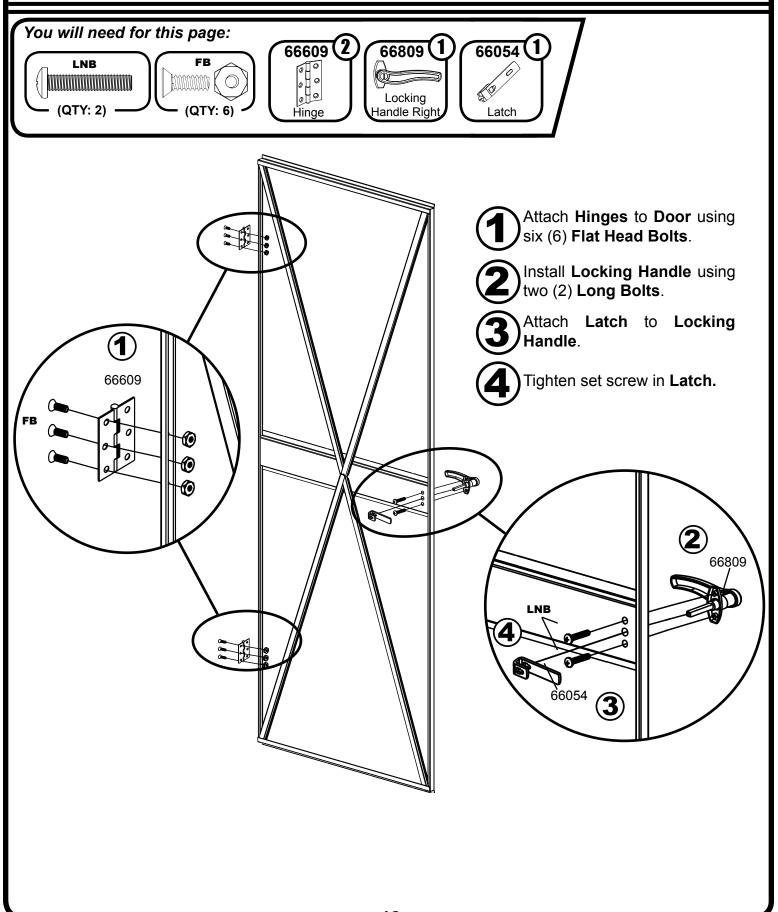


19AH

Step 7: Left Door Assembly

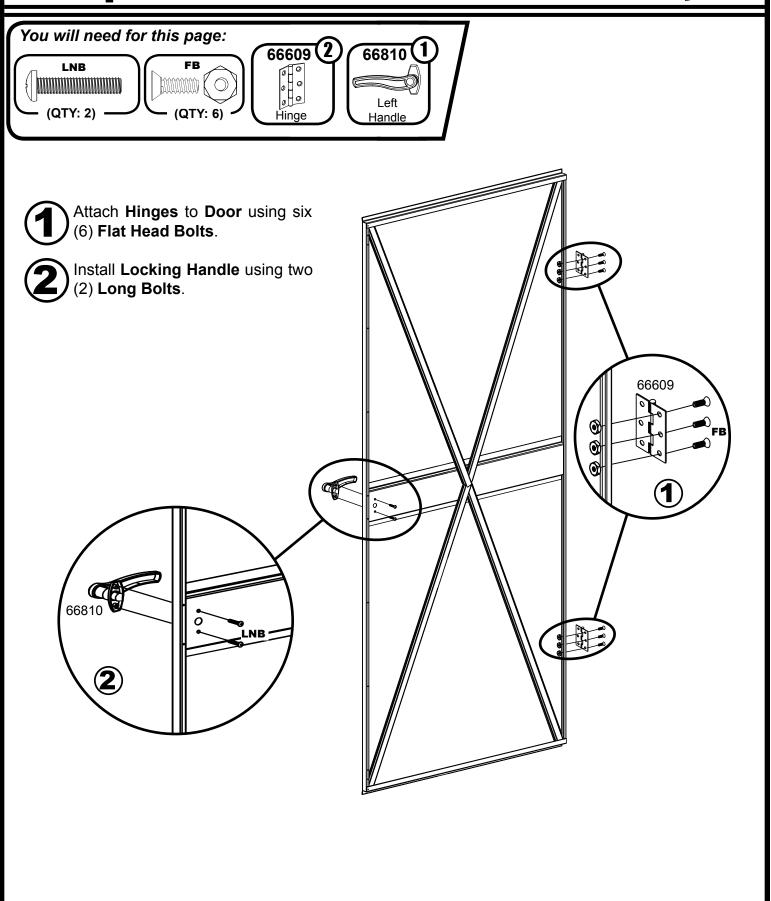

Step 7: Continued

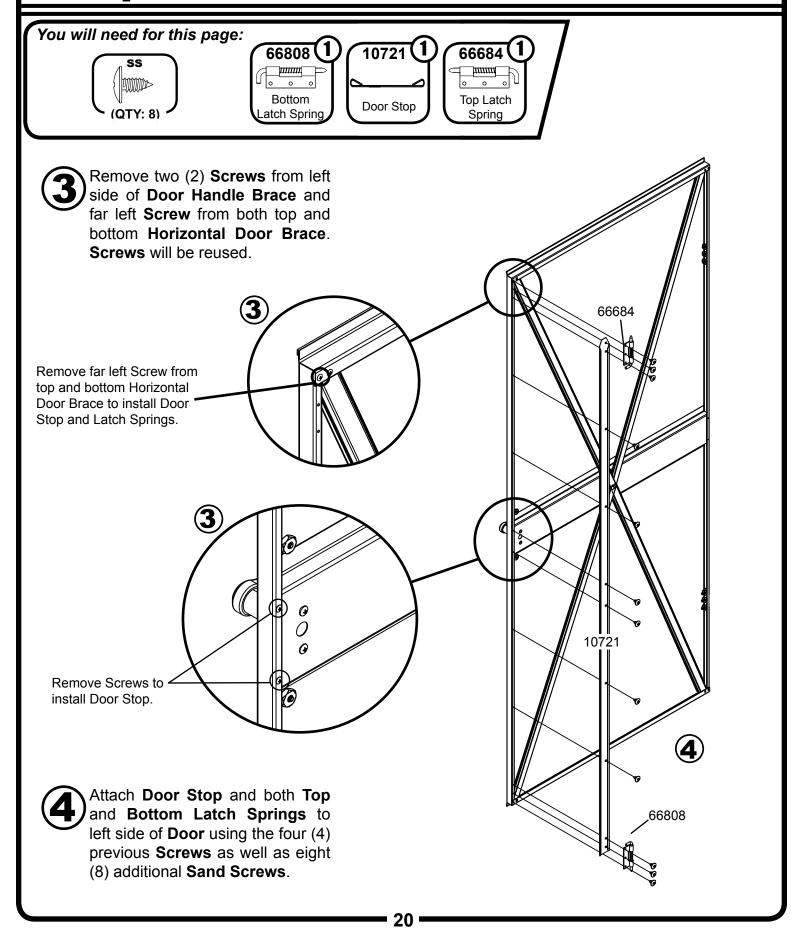

Step 8: Floor Assembly

You will need for this page:





Assemblies from Step 1:

Front/Rear Floor Frame Assemblies (2)

NOTE DO NO

 
Do NOT fasten your Floor Frames to your Base at this time. You will anchor your building after it is erected.

Overlap Floor Frames as shown. Set Floor Frame with large holes on top at each corner. Assemble the four (4) corners of the Floor Frame using two (2) Sand Screws at each corner as shown. Front/Rear Floor 10850 Frame Assembly Front/Rear Floor 10850 Frame Assembly Front When diagonal measurements are equal, the Frame is square. The Floor Frame must be BOTH square AND level or the holes will not line up properly.

The remainder of the building assembly requires many hours and more than one person. Do not continue beyond this point if you do not have enough time to complete the assembly today. A partially assembled building can be severely damaged by light winds.

Step 9: Corner Panels

You will need for this page:






Be cautious when maneuvering and placing Panels. Once Panels begin to go up it is important to be able to finish in a timely manner to reduce the possibility of wind damage to your building.




NOTE


Use one person to support the Corner while another secures the Panels. Do not leave the Corner unsupported until it is secure.

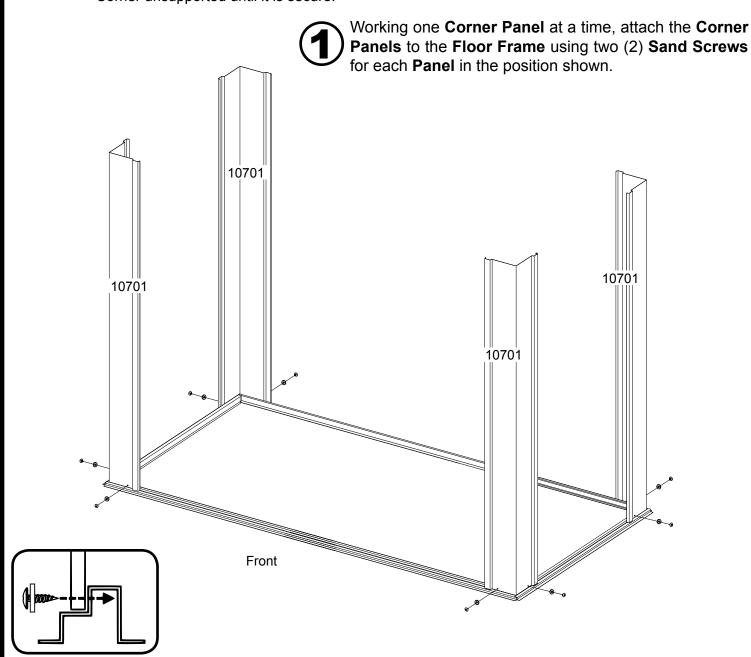

Always attach Wall Panels to Floor Frames with Screws as shown. Rest Panel on Floor Frame, aligning holes in the Panel and Floor Frame.

  Step 10: Wall Framing









Assemblies from Step 2 and Step 3:


- Rear Wall Angle Assembly (1)
- Header Assembly (1)
- Install Rear Wall Angle Assembly to Rear Corner Panels using two (2) Sand Screws as shown.
- Install the **Header Assembly** using two (2) **Sand Screws**.
- Install both Side Wall Angles to Corner Panels using two (2) Sand Screws per Side Wall Angle, sliding the front end inside of the Front Header and the rear end under the Rear Wall Angle as shown.

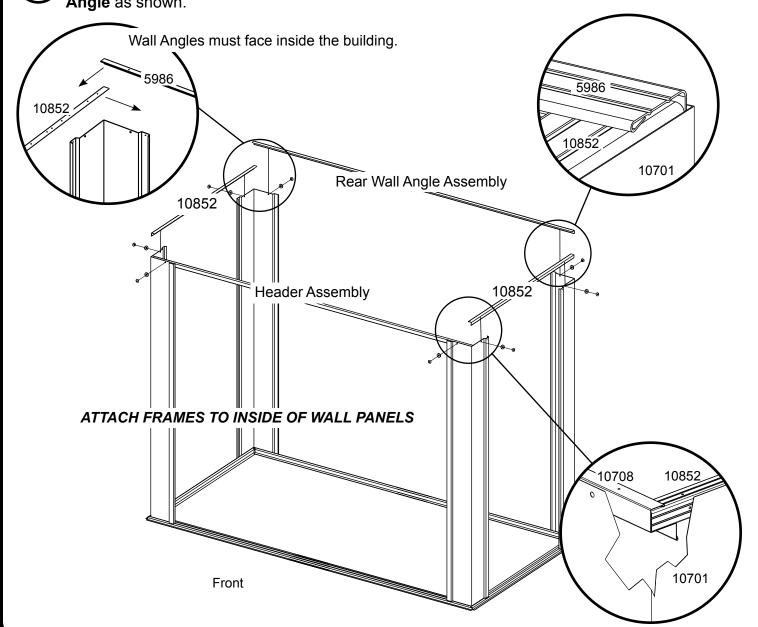


Step 11: Wall Panels

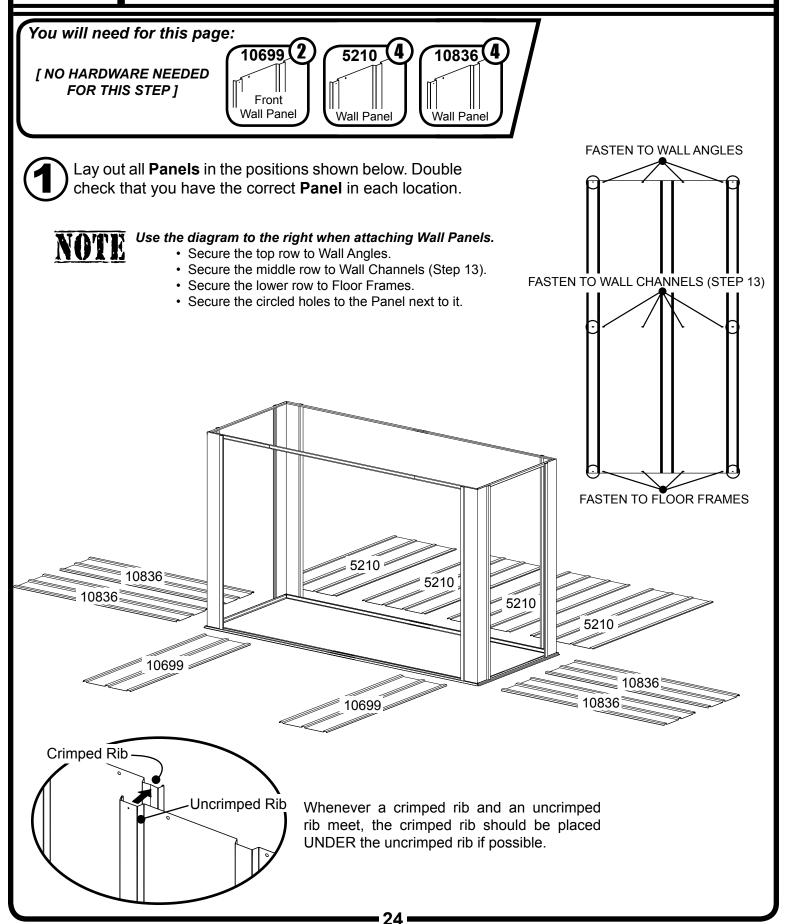


Step 11: Continued

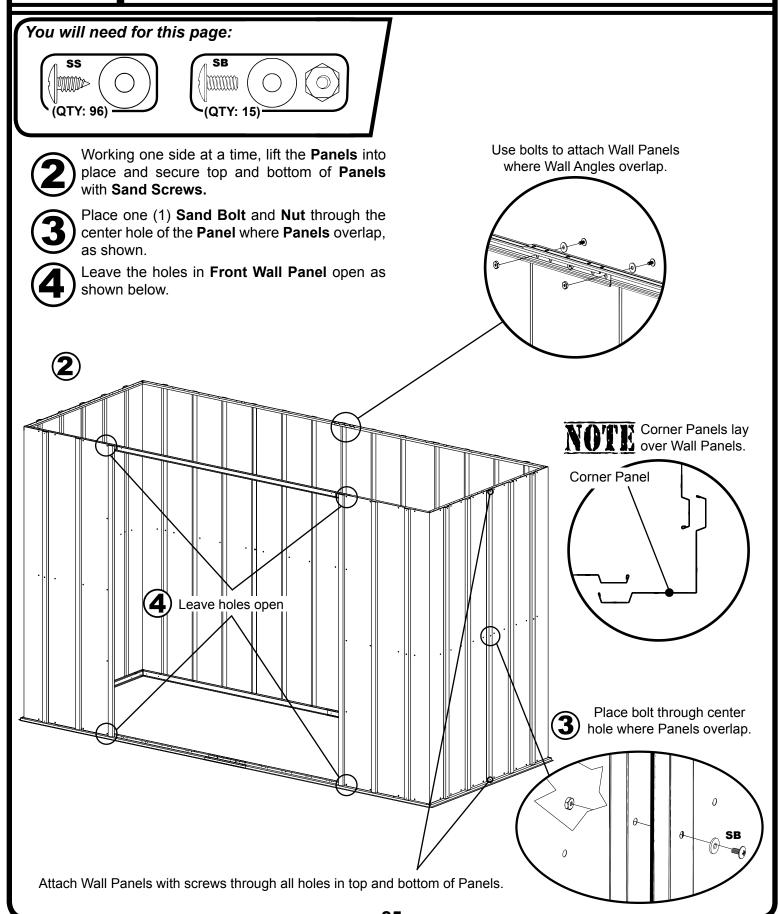


Step 12: Door Jambs

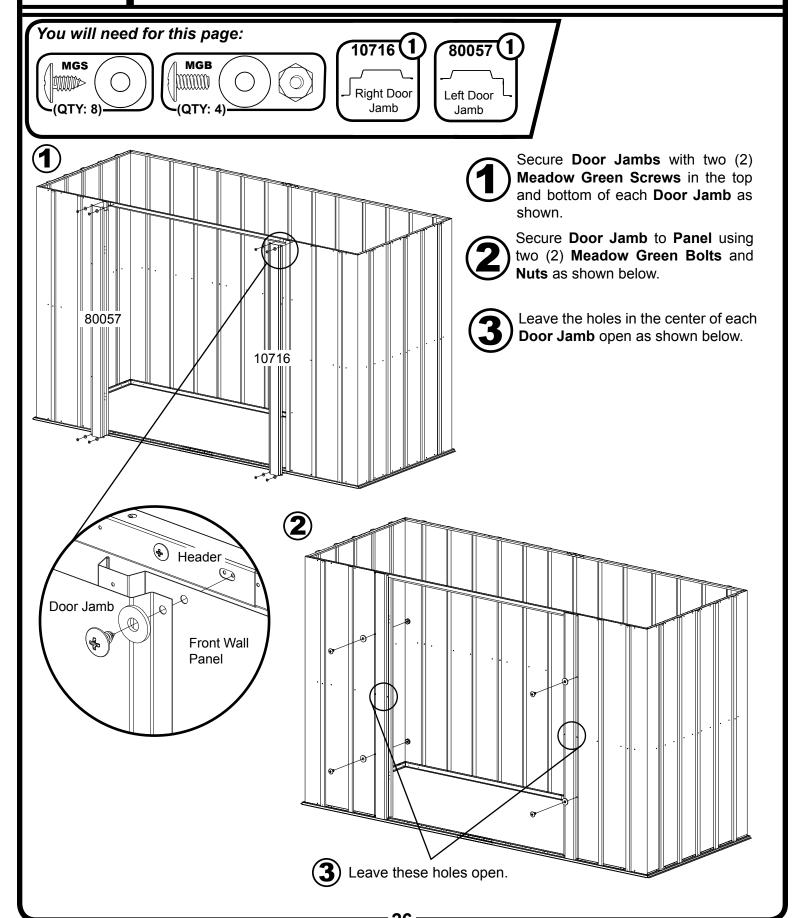

Step 13: Wall Channels

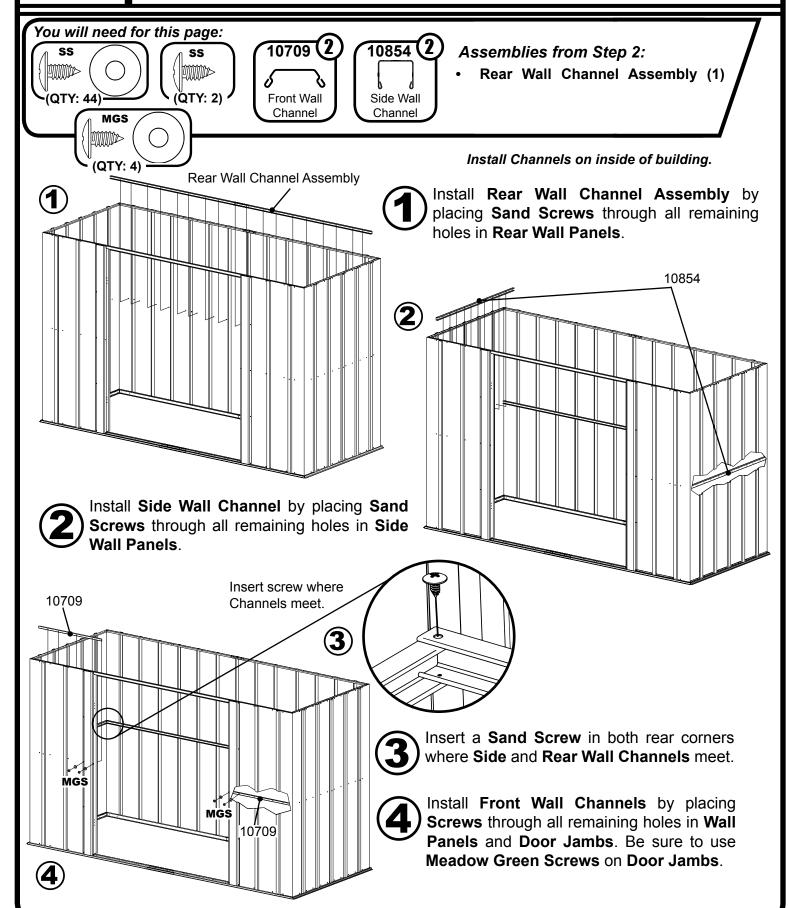

Step 14: Gables

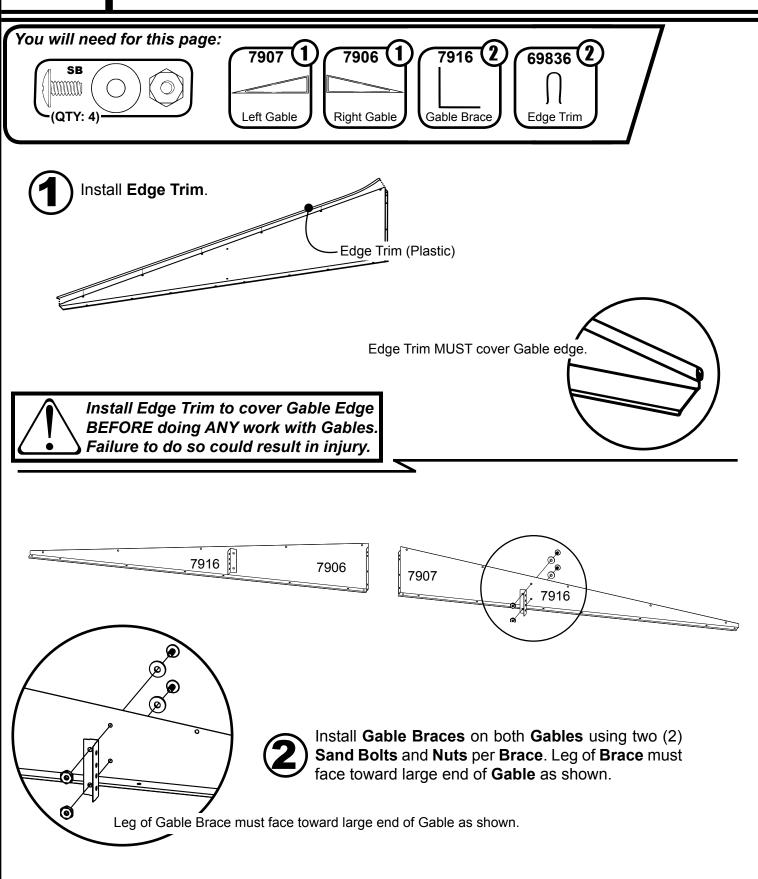


Step 14: Continued

You will need for this page:


(QTY: 12)

Working one (1) Gable at a time, attach Gables to Side Wall Angles with six (6) Sand Screws per Gable as shown below.

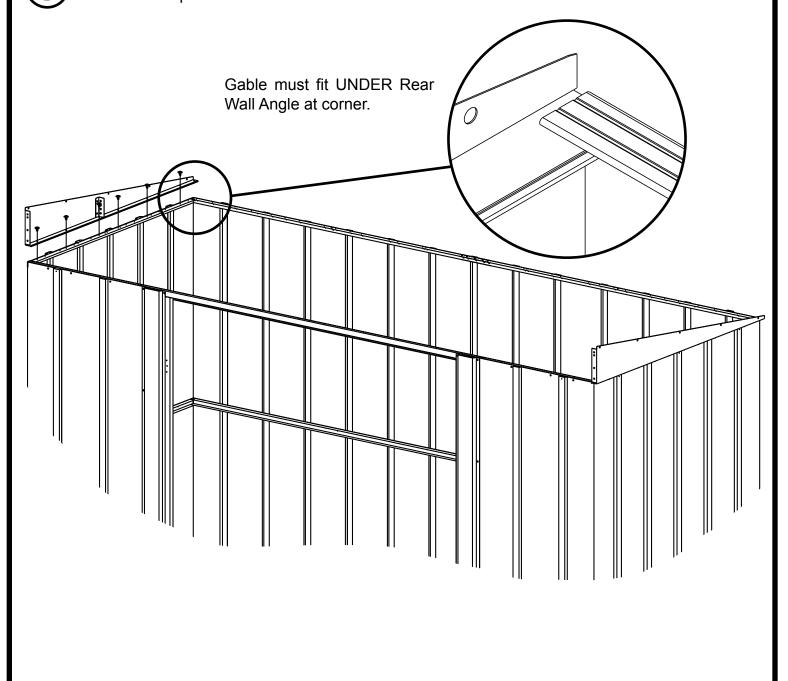


Step 15: Roof Framing

 
You will need for this page:




Assemblies from Step 4:

 Roof Beam Assembly (1)




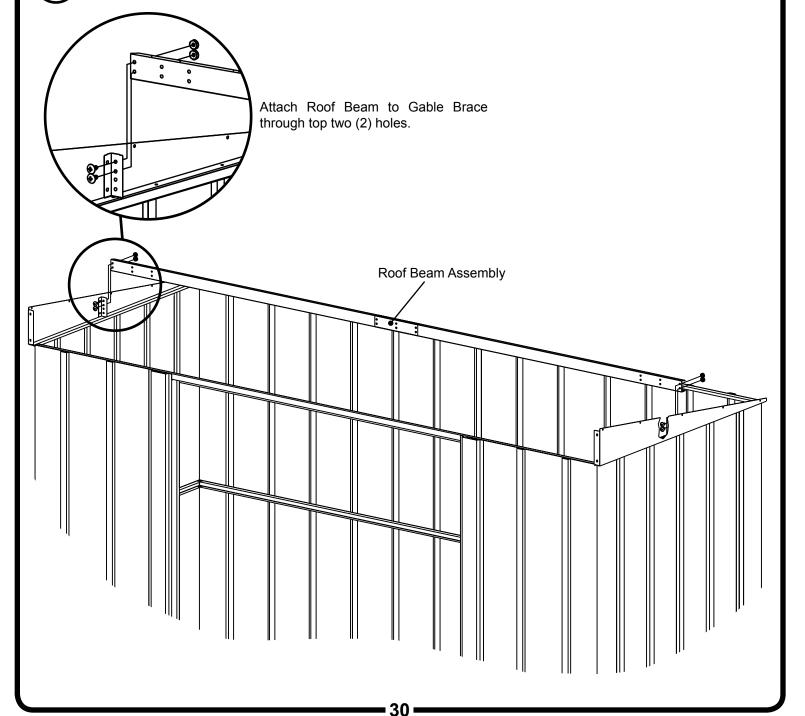


Step 16: Window Assembly

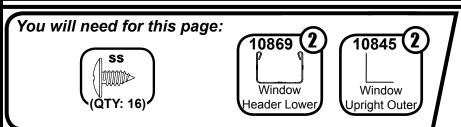


- Working one part at a time, insert **Window Header Lower** into slot of **Gable** aligning front hole with bottom hole in **Gable**. This is to ensure the hole alignment with the **Front Header** is correct.
- Using two (2) **Window Upright Outers** back-to-back as shown, place in between **Window Headers Lower** to gauge the gap.
- Install Window Header Lower to top of Front Header using eight (8) Sand Screws in the order shown. Be sure to leave specified holes open. Repeat for other side.

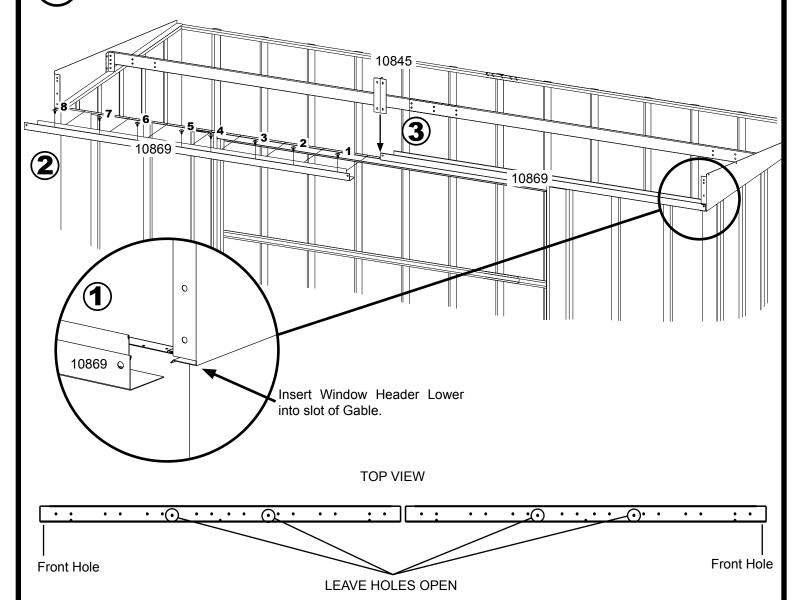


Step 16: Continued

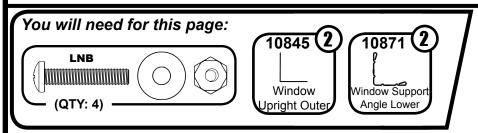


Attach Window Upright Outer and Window Support Angle Lower to Window Header Lower using four (4) Long Bolts and Nuts. DO NOT TIGHTEN BOLTS AT THIS TIME.

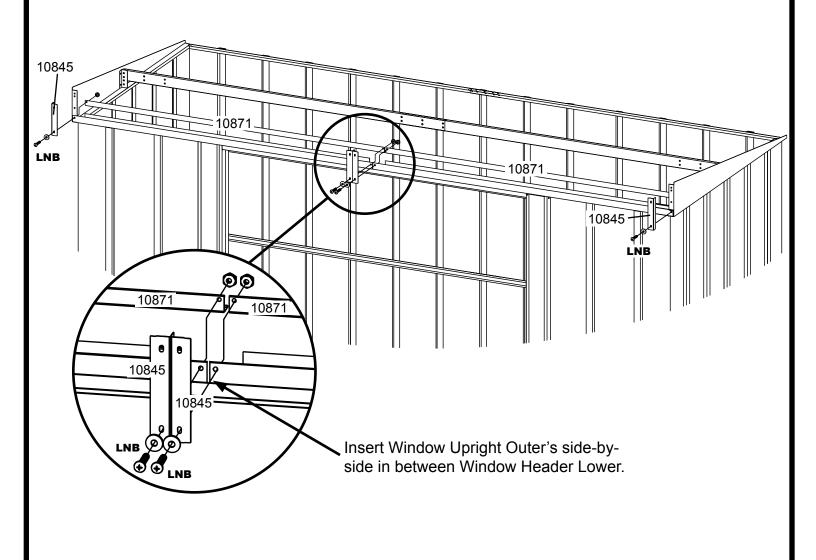

Step 16: Continued

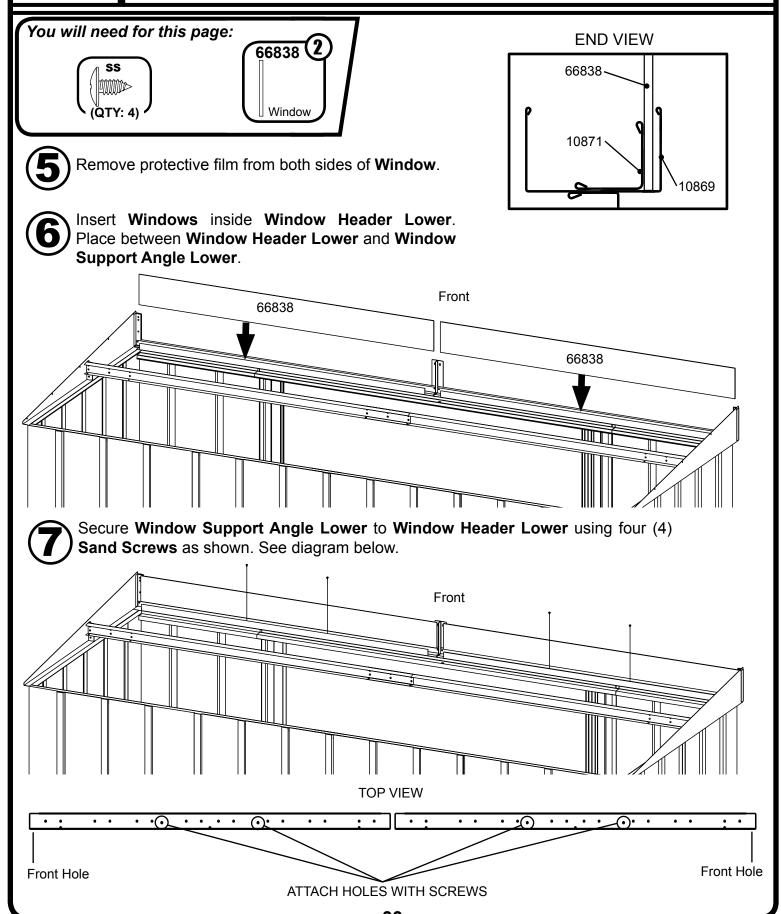

Step 16: Continued

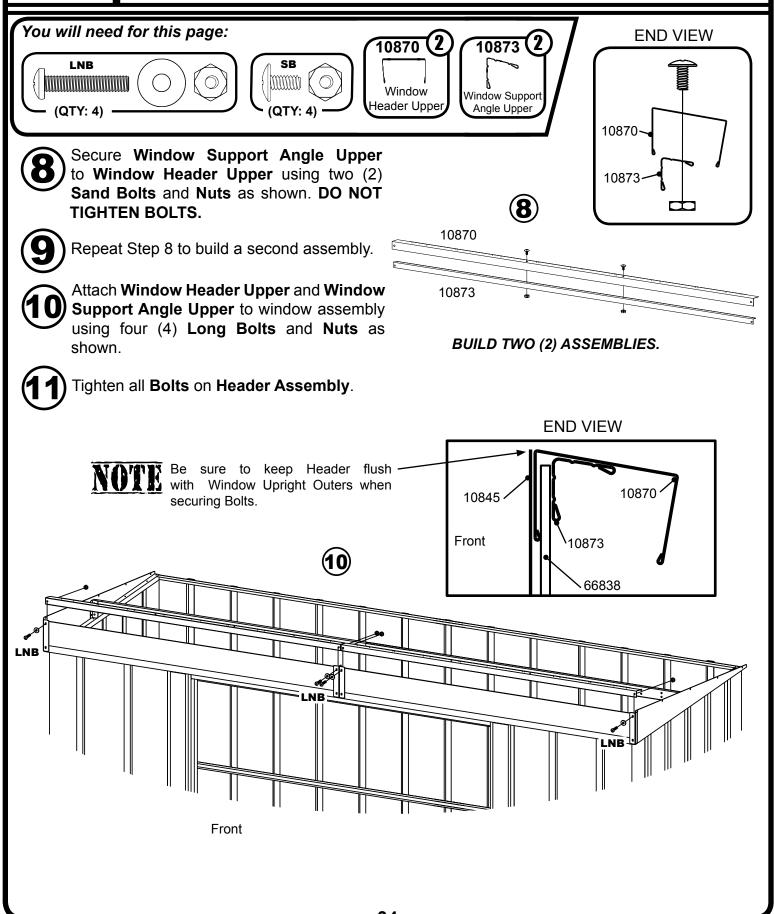

Roof Install Prep Page


Use the information on this page to complete step 17.


If Roof Beam holes do not line up with Roof Panel holes, shift the building from left to right. If this does not help, your building may not be level. Shim the corners until holes line up.


Measure the building diagonally again to make sure the building is square. The building should be square at the base and at the top. This will make roof panels fit better and holes will better align.

Be sure to careruny roman.

Placement Order Diagram on this page. Be sure to carefully follow the Roof Panel

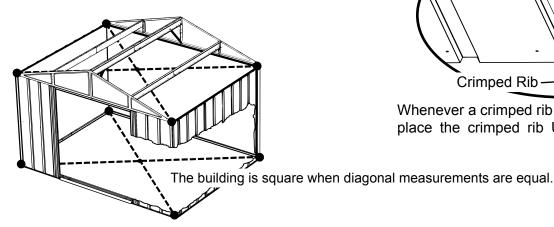


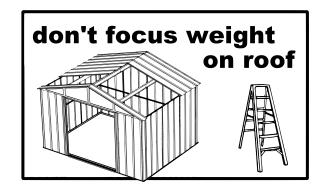


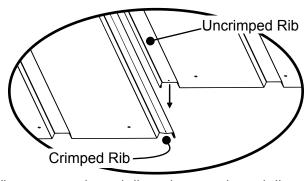



Whenever a crimped rib and an uncrimped rib meet, place the crimped rib UNDER the uncrimped rib.

 
Roof Panel Placement Order

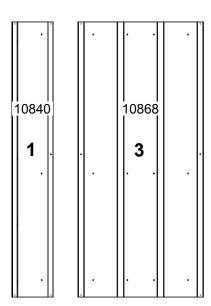

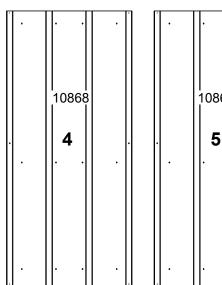

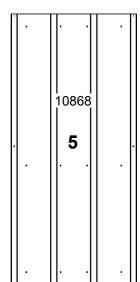


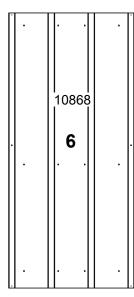




FRONT

Step 17: Roof Assembly

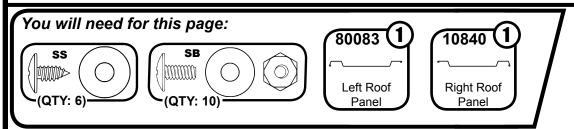

- Working one (1) Panel at a time, secure Right Roof Panel to Header Assembly by placing one (1) Sand Screw in hole #1 (from the diagram below). Carefully remove the Gable Edge Trim once the Panel is in position. Do not discard the Edge Trim it will be used again on step 20.
- Fasten **Panel** to **Gable** by placing **Sand Bolts** through holes #2, #3, #4, #5, and #6. Fasten the holes in order.

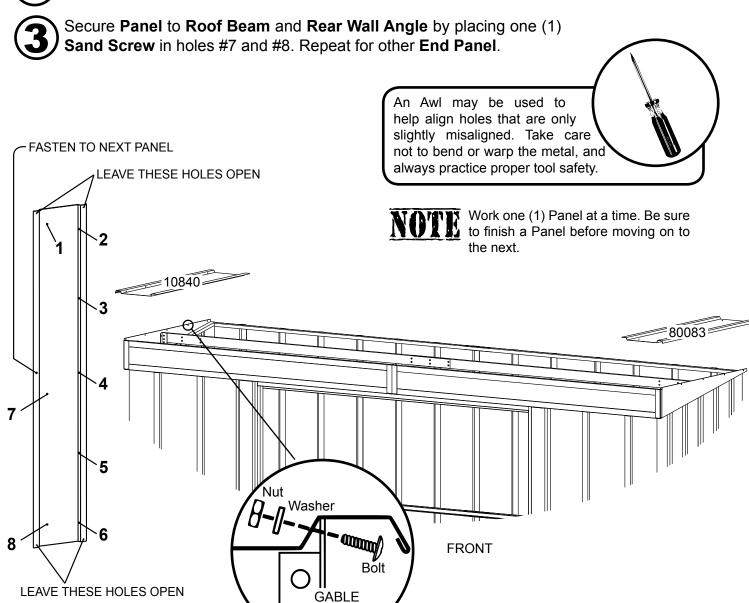


- 36

Step 17: Continued


You will need for this page: 10868 LEAVE HOLES OPEN Roof Panel (QTY: 5) Attach Panels #3, #4, #5, and #6 in order given in the diagram on page 35. Use the FASTEN TO HEADER WITH SCREWS diagram to the right while assembling the FASTEN TO ROOF BEAM WITH SCREWS roof. An Awl may be used to help align holes that are only slightly misaligned. Take care not to bend or warp the metal, and FASTEN TO NEXT PANEL WITH BOLT AND NUT always practice proper tool safety. Work one (1) Panel at a time. Be sure to finish a Panel before LEAVE HOLES OPEN the next. FASTEN TO REAR WALL ANGLE WITH SCREWS

FRONT

Step 18: Roof Trim

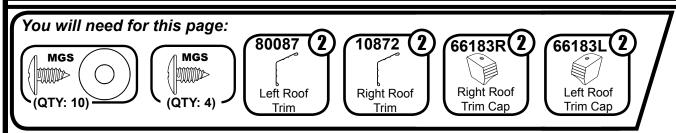


- Position **Left** and **Right Roof Trim** and secure with ten (10) **Meadow Green Screws**. Do not fasten the last screw on each end.
- Position and secure each Roof Trim Cap using one (1) Meadow Green Screw as shown.

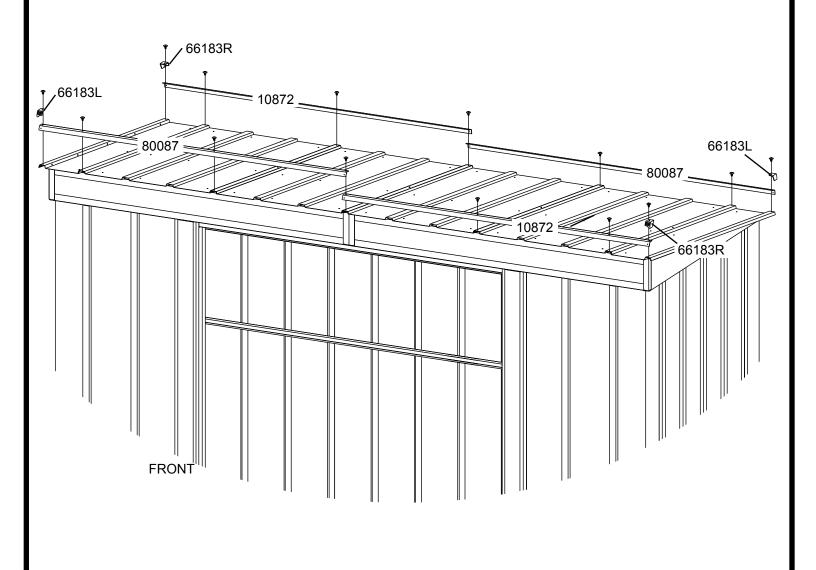


  Step 19: Door Installment










Assemblies from step 6 and step 7:

- Right Door Assembly (1)
- Left Door Assembly (1)

NEED AT LEAST TWO PEOPLE TO PERFORM THIS STEP!

Using three (3) Flat Head Bolts and Nuts per Door Hinge, secure Doors to Door Jambs.

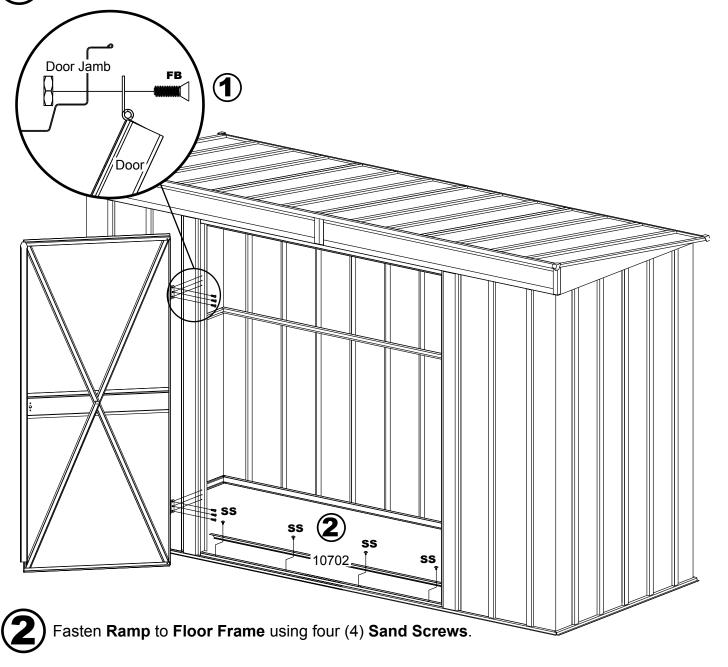


Step 20: Seal Window


You will need for this page:

[NO HARDWARE NEEDED FOR THIS STEP]

Reused Parts:

 • Edge Trim (1)



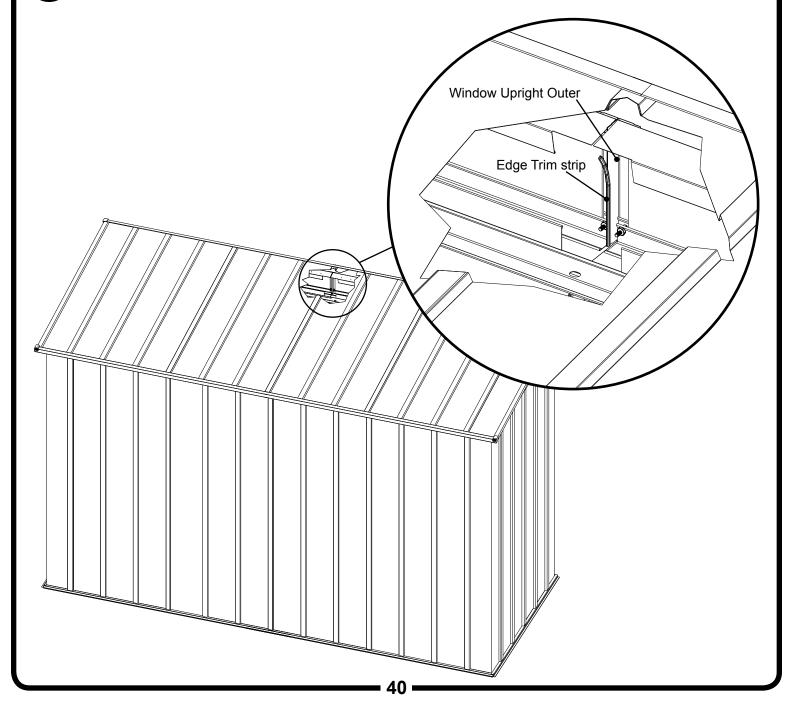

ANCHORING OPTIONS...


IMPORTANT:

- If you have swing doors, they must hang and swing level before anchoring building.
- Anchor your building at this time. See below for details on anchoring.
- If you have purchased a Floor Frame Kit, you should install it at this time.
- Please take a moment to ensure that the building is installed in accordance with these instructions and with all applicable regulations.


Anchoring Down The Building

The entire floor frame MUST be securely anchored once the building is erected. Below are recommended ways of anchoring.

Arrow Anchoring Kit: (Model No. AK4 or 60298) Recommended for use with **any** suggested **base**. **Contains:** 4 Anchors with Cable, Clamps and installation instructions.

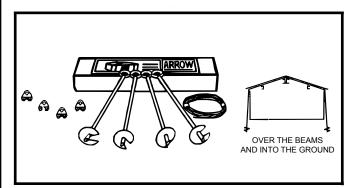


Arrow Anchoring Kit: (Model No. AK100 or 68383) Recommended for use with the **concrete** base. **Contains:** Corner gussets, perimeter clips, hardware, 1/4" masonry drill bit and installation instructions.

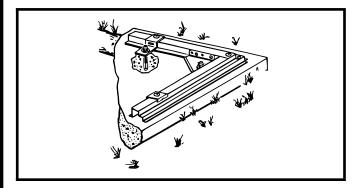


Anchoring into Wood/Post:

Use 1/4" (6 mm) Wood Screws. There are 1/4" (6 mm) dia. holes provided in the frames for proper anchoring.

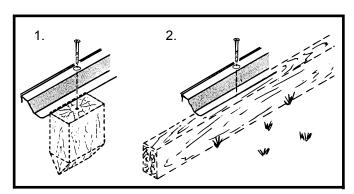

Anchoring into Concrete:

- 1. For poured concrete slab or footing or patio blocks: Use 1/4" x 2" (6 mm x 51 mm) Lag Screws.
- 2. For Anchor Post of Concrete poured after building is erected: Use 1/4" x 6" (6 mm x 152 mm) Lag Screws.

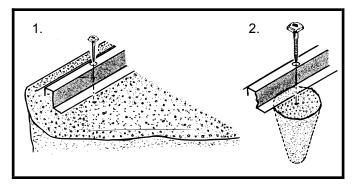

An Anchor Kit may be purchased online at www.arrowsheds.com You can also purchase one over the phone by calling 1-800-851-1085. See accessories page for details.

CARE & MAINTENANCE...

Exterior Care:

For a long lasting finish, clean and wax the exterior surface. We recommend washing with a mild soap solution. DO NOT use power washing to clean your shed. Using a spray automotive type wax periodically on the exterior is highly recommended if you are in a high humidity or coastal climate region.

Combustibles and corrosives must be stored in air tight containers designed for chemical and/or combustible storage. Corrosive chemicals such as fertilizers, pesticides and herbicides should be cleaned off the interior and exterior surfaces immediately. Rust caused by chemical damage is not covered by the warranty.

DO NOT STORE POOL CHEMICALS IN YOUR SHED - THIS VOIDS YOUR WARRANTY

Rust protection precautions may help to stop rust from developing, or stop it guickly as soon as it appears.

- Avoid nicking or scraping the coating surface, inside and out.
- Keep roof, base perimeter and door tracks free of debris and leaves which may accumulate and retain moisture. These can do double damage since they give off acid as they decay.
- Touch up scrapes or nicks and any area of visible rust as soon as possible. Make sure the surface is free of moisture, oils, dirt or grime and then apply an even film of high quality touch-up paint.
- Various paint manufacturers provide products for rust treatment and coverage. If surface rust does appear on your shed we recommend treating those areas as soon as possible, following the paint supplier of your choice instructions.
- Our customer service department can provide the paint tinting formula for matching the color of your shed. We also have touch-up paint available for repairing small nicks and scratches.

Roof:

Keep the roof clear of leaves and snow. Heavy amounts of snow on the roof can damage the building making it unsafe to enter. In snow country, Roof Strenghtening Kits are available for most Arrow Buildings for added protection against heavy snow accumulation.

Doors:

For sliding doors, always keep door tracks clear of dirt and other debris that prevents them from sliding easily. Lubricate door track annually with furniture polish or silicone spray. Keep doors closed and locked to prevent wind damage.

Fasteners:

Use all washers supplied to protect against weather infiltration and to protect the metal from being scratched by the screws. Regularly check screws, bolts, nuts, etc., and retighten as necessary.

General:

- A plastic sheet (vapor barrier) placed under the entire floor area may reduce condensation.
- Wash off inked part numbers on coated panels with soap and water.
- Silicone caulking may be used for watertight seals throughout the building.

 
Please note, Manufacturer cannot be held responsible for any consequences due to buildings that are not installed per these instructions, or for damage due to weather conditions or acts of God.

Keep these assembly instructions and owner's manual for future reference.

ARROW ACCESSORIES.

ANCHOR KITS Model No. AK4

Anchor Kit contains heavy-duty steel augers, 60' (18 m) of steel cable and 4 cable clamps. No digging or concrete pouring, just insert cable under roof, over roof beams, into augers and twist augers into the ground. For buildings larger than 10'x9' (3,0 m x 2,6 m), use 2 kits.




TOOL HANGING RACK Model No. TH100

The perfect tool organizer. Twin 25 1/2" (64,8 cm) steel channels plus five heavy-duty snap-in hangers and a small tool holder for screwdrivers, pliers, etc. Holders slide along channel for fully adjustable spacing. Great for garage, basement, or the back of any door. Fits all Arrow storage buildings.




Model No. AK100


New concrete anchor system permits anchoring any size Arrow building directly to a concrete slab. Each kit contains heavy-duty, hot-dipped galvanized steel corner gussets and perimeter clips which fit over the floor frame and lag bolt into a concrete slab. Full assembly instructions and a 1/4" masonry drill bit are included.

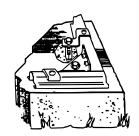

SHELF UNITS

  Heavy-duty, galvanized steel shelf units help organize storage space. They easily mount on the wall or sit on the floor. Fits all Arrow buildings.*







Model No. SS404

 
- Makes 8" to 12" (20,3-30,5 cm) Grey color wide shelves in any length.
- Brackets, braces. hardware included. Lumber is not included.

Model No. SS900-A

- · 3 shelves
- Holds up to 85 lbs. (38 kg) (even weight distribution)

Model No. AK600

Earth Anchor Kit anchors any size Arrow building to the ground. Each kit contains heavy duty, hot-dipped galvanized steel corner gussets and 4 earth anchors.



* Some drilling required to fit buildings without mid-wall bracing.

SPECIAL NOTICE ON DELIVERY:

If your accessory is shipped via truck line a day time phone number is required to arrange delivery. If no one is available to sign for the delivery, you may be subject to a re-delivery charge assessed by the carrier.

HOW TO ORDER

We recommend that you purchase accessory items from your local storage building dealer whenever possible; however, because the full line of accessories is not always available from all dealers, Arrow is offering them to you on a direct basis.

Purchase Online at www.arrowsheds.com

Purchase over the phone by calling 1-800-851-1085

Most major credit cards accepted. Allow 2 weeks for Delivery.