





Secure the Roof Panels to the Truss and Wall Panels using four (4) 1/4" x 5/8" Pan-Head Screws (ADZ) and four (4) 1/4" x 1 1/8" Pan-Head Screws (ADZ). Repeat steps 9.3 - 9.4 for the other front Roof Panel.

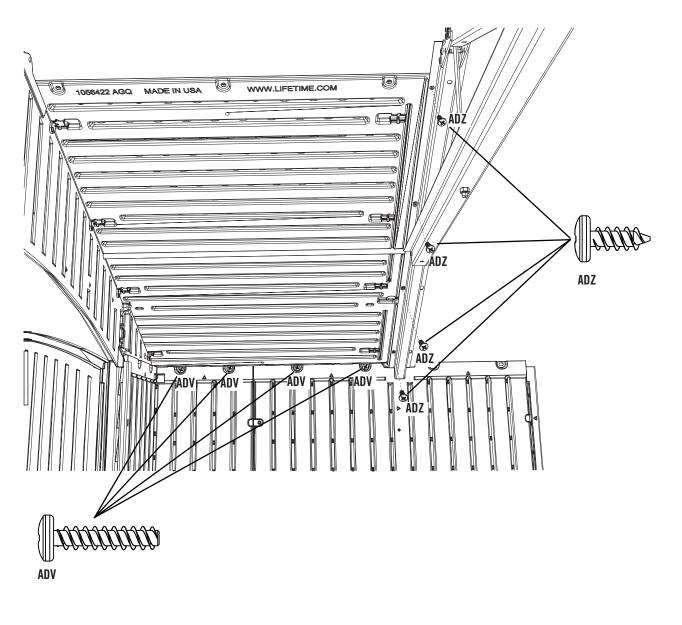


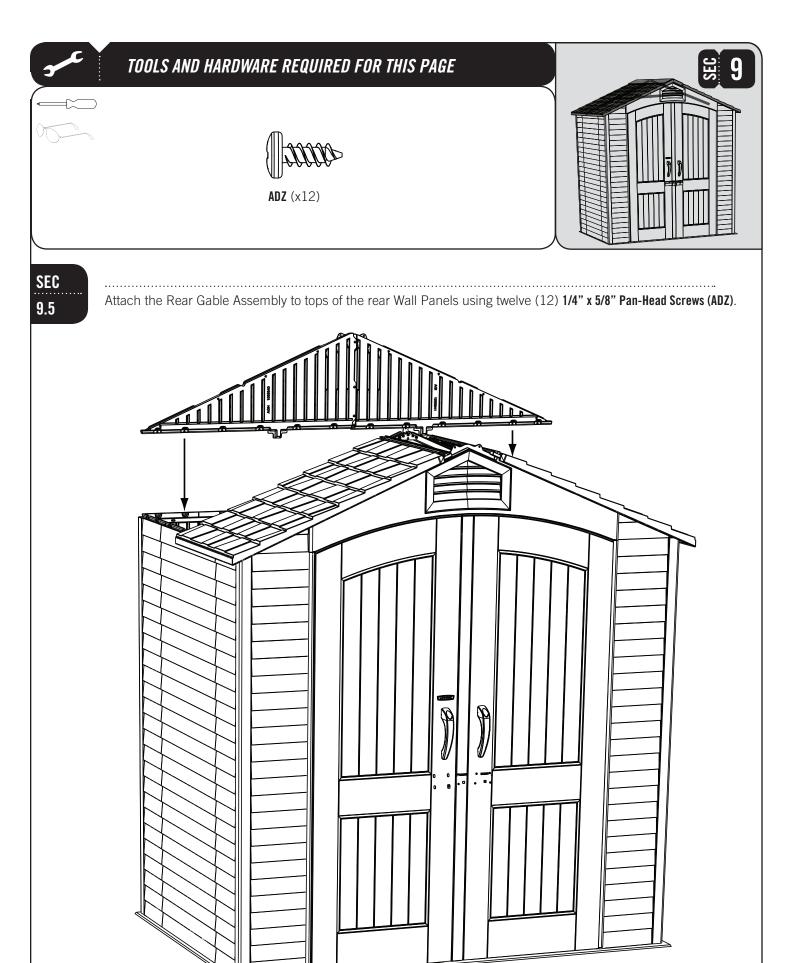

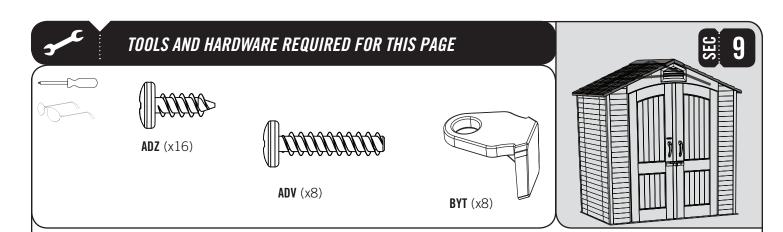


Attach the last two Roof Panels to the Shed. Secure the Rear Gable Assembly and Roof Panels together using eight (8) Gable-to-Roof Clips (BYT) (In the direction illustrated), sixteen (16) 1/4" x 5/8" Pan-Head Screws (ADZ), and eight (8) 1/4" x 1 1/8" Pan-Head Screws (ADV). The Screws (ADV) connect the tops of the Wall Panels to the bottom of the Roof Panels.

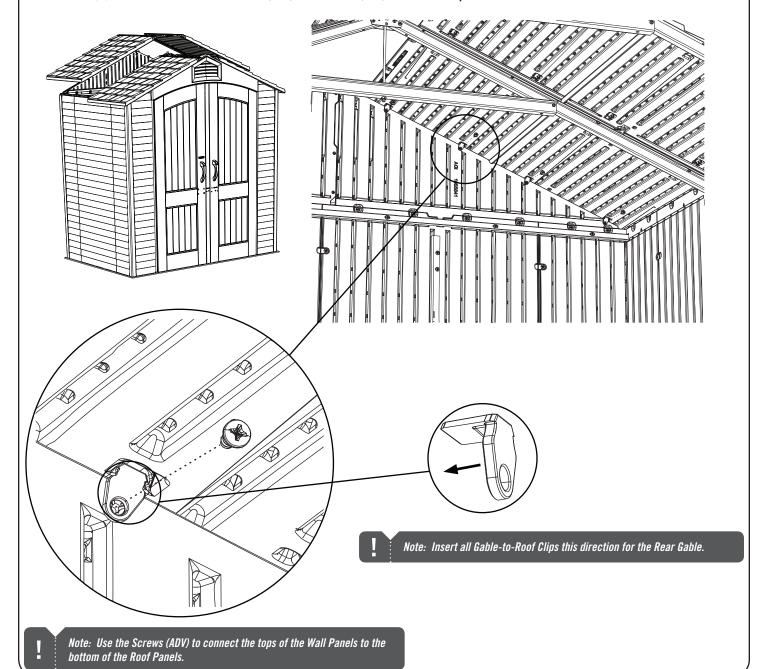

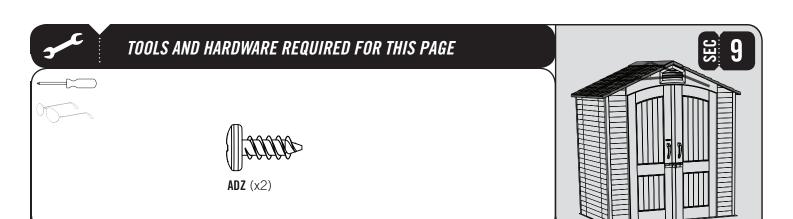


 Insert two (2) End Roof Cap Filters (BYX) into the slots in an End Roof Cap (BYW) as shown. Repeat this step for the second End Roof Cap.




SEC 9.8

Attach the End Roof Cap to the front of the Shed. Secure the End Roof Cap to the two the front Roof Panels using two (2) 1/4" x 5/8" Pan-Head Screws (ADZ).

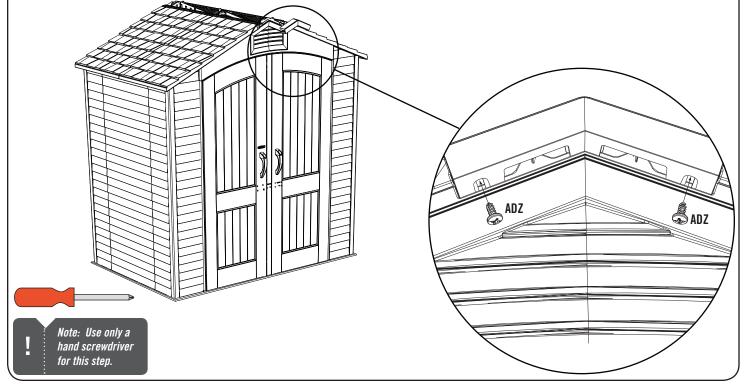




Secure the End Roof Cap to the Entry Gable using two (2) 1/4" x 5/8" Pan-Head Screws (ADZ).

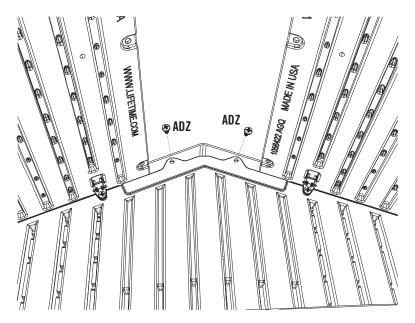

SEC 9.10

Insert the **Skylight (BYV)** into the End Roof Cap.

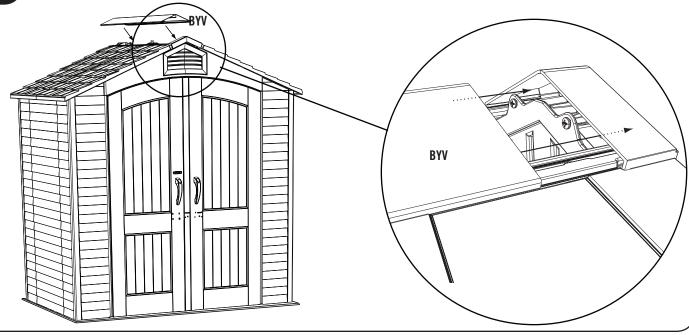











**SEC** 9.11

Secure the Skylight to the Roof Panels using twelve (12) 1/4" x 5/8" Pan-Head Screws (ADZ).

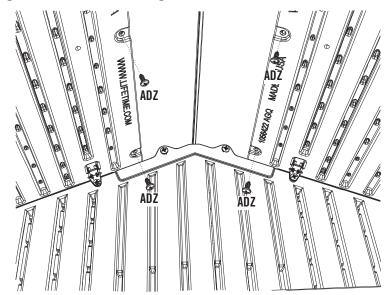

SEC 9.12

Secure the second End Roof Cap (BYW) to the rear of the Shed using four (4) 1/4" x 5/8" Pan-Head Screws (ADZ).

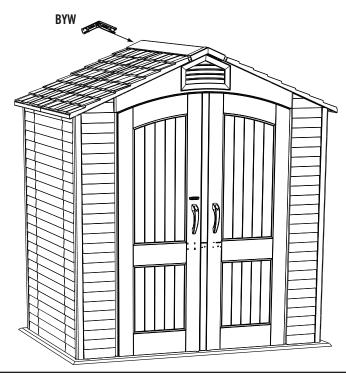

## ¥ 10 TRUSS, REAR GABLE, & ROOF INSTALLATION

### HARDWARE REQUIRED

## HARDWARE BAG REQUIRED: BHH, BHI (x2)

Hardware shown at actual size



1/4" x 5/8" Pan-Head Screw

Hardware shown at 15% of actual size

**AIY** (x2)

10" Shelf Bracket

Hardware shown at actual size



1/4" x 5/8" Pan-Head Screw

### PLASTIC PARTS REQUIRED

LOCATED IN BOX 2 AND SMALL PARTS BOX: CVX

Parts shown at 8% of actual size



1002314

AFS (x1)10" x 30" Shelf



AFZ(x2)Corner Shelf

### TOOLS REQUIRED







Phillips Screwdriver

 
**Flashlight** 

Safety Glasses










**AIY** (x2)




SEC 10.1

#### 10" x 30" SHELF INSTALLATION

Insert a pair of 10" Shelf Support Brackets (AIY) (usually on the rear Wall) into the slots of two adjacent Wall Support Channels and set a 10" x 30" Shelf (AFS) on the Brackets. Secure with four (4) 1/4" X 5/8" Phillips Pan-Head Screws (ADZ) as shown.

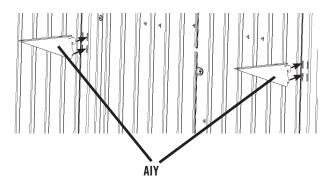

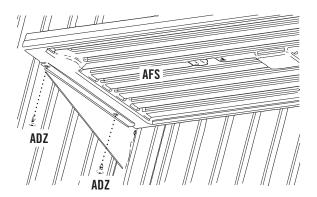



### **WARNING**

The total weight placed on a 10" x 30" Shelf cannot exceed 30 pounds (14kg.) per Wall Panel.











SEC 10.2

#### **CORNER SHELF INSTALLATION**

Fold up edges of **Corner Shelf (AFZ)**. Align the holes in Corner Shelf with a set of pre-made holes in a Corner Wall Panel and secure with four (4) 1/4" x 5/8" Phillips Pan-Head Screws (ADZ). Corner Shelves may be secured to any Corner Wall Panel. Repeat this step for the second Corner Shelf.

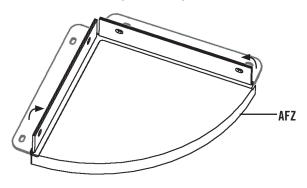

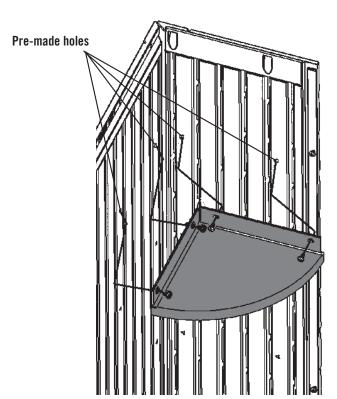



### **WARNING**

The total weight placed on a Corner Shelf cannot exceed 10 lb. (4.5 kg).

## B 11 DOOR ALIGNMENT

## HARDWARE REQUIRED

NO HARDWARE PROVIDED FOR THIS SECTION

TOOLS REQUIRED

SMALL PARTS BOX REQUIRED: CVX

**AIX** (x4) Wood Shim


Safety Glasses





**AIX** (x4) Wood Shim


#### NO HARDWARE PROVIDED FOR THIS PAGE

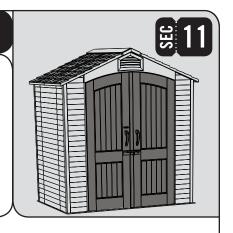


### SEC 11.1

#### **DOOR ALIGNMENT**

In some cases, the shed doors may not completely line up at the tops (Fig. 1). When this happens, identify which side is higher and use a **Wood Shim (AIX)** to slightly raise the back corner of the high side until doors line up (Fig. 2). If doors need further adjustment, insert another shim under the front corner opposite of the first shim. If the doors still need further adjustment, stack additional shims (one at a time) alternating between the back and front shims. After doors are aligned, cut off any portion of wood shim that is still exposed. From inside the shed, drive a 1" nail through the floor into the shim to hold it in place.

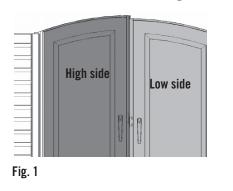

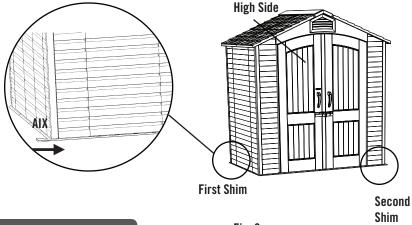

I

Note: Shim should be placed at the corner, running directly under one wall.

## ₩ 12 LATCH INSTALLATION

### HARDWARE REQUIRED

### HARDWARE BAG REQUIRED: CVP

Hardware shown at actual size



**ACA** (x3)

1/4" x 1/2" Carriage Bolt



**AEB** (x3)

1/4" Flat Washer



#10 x 1/2" Pan-Head Screw



**AAB** (x3)

1/4" Centerlock Nut

 


#10 x 3/4" Self-Drilling/Self Tapping Screw



#10 Flat Washer

Hardware shown at same scale



**CVW** (x1) Door Latch



**CVT** (x1)

Left Door Latch Bracket



 
**CVU** (x1)

Large Right Door Latch Bracket



**CVV** (x1)

Small Right Door Latch Bracket




**CVS** (x1)

Left Door Latch Cover



**CVR** (x1)

 
Small Right Door Latch Cover



CVQ (x1)

Large Right Door Latch Cover

### TOOLS REQUIRED

 








**Phillips Screwdriver** 

7/16" Wrench

**Electric Drill** 

**Safety Glasses** 

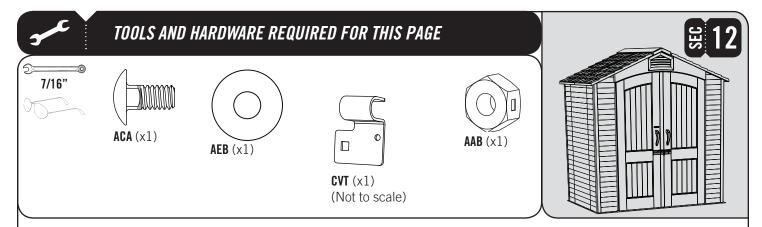



#### ENSURE YOU ALIGN THE DOORS BEFORE PROCEEDING WITH THIS SECTION!

SEC 12.1


#### LATCH INSTALLATION

Ensure you align the Doors before proceeding with this section. Connect the Left Door Latch (CVT) to the Left Door using one (1) 1/4" x 1/2" Carriage Bolt (ACA), one (1) 1/4" Flat Washer (AEB), and one (1) 1/4" Center Lock Nut (AAB). Do not tighten Nut until instructed to do so.

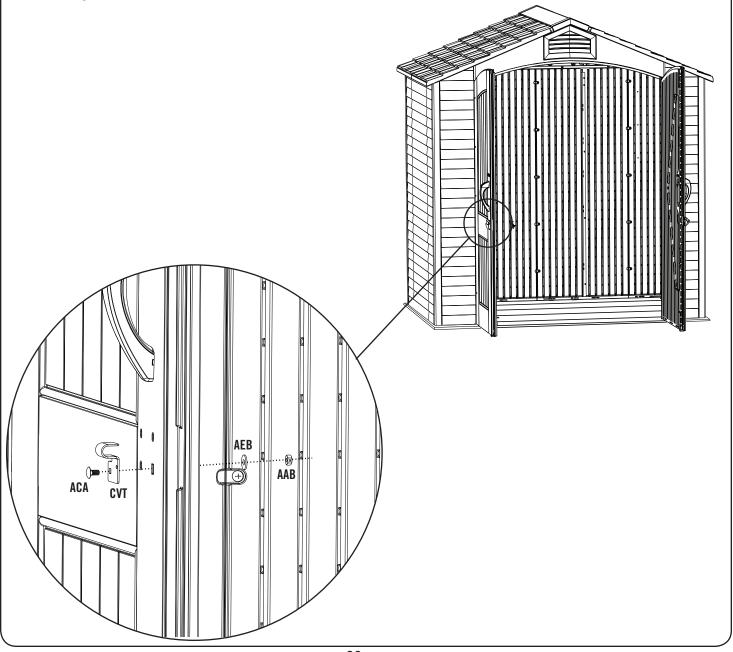

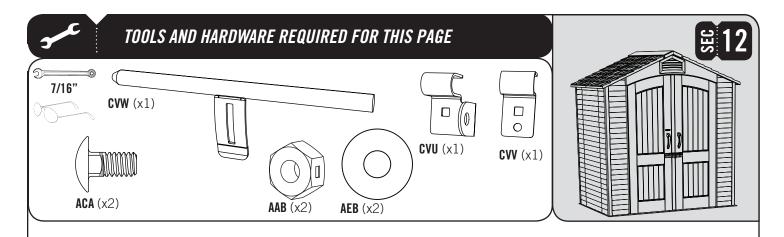



Slip the **Door Latch (CVW)** into the loops of the **Large Right Door Latch Bracket (CVU)** and the **Small Right Door Latch Bracket (CVV)** as shown.

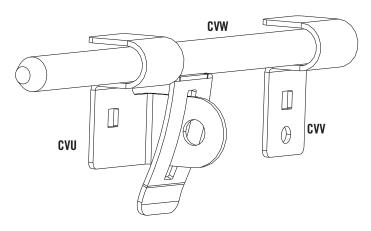


SEC 12.3


Connect the Latch Assembly to the Right Door using two (2) 1/4" x 1/2" Carriage Bolts (ACA), two (2) 1/4" Flat Washers (AEB), and two (2) 1/4" Center Lock Nuts (AAB). Tighten these two Nuts securely, but do not overtighten.

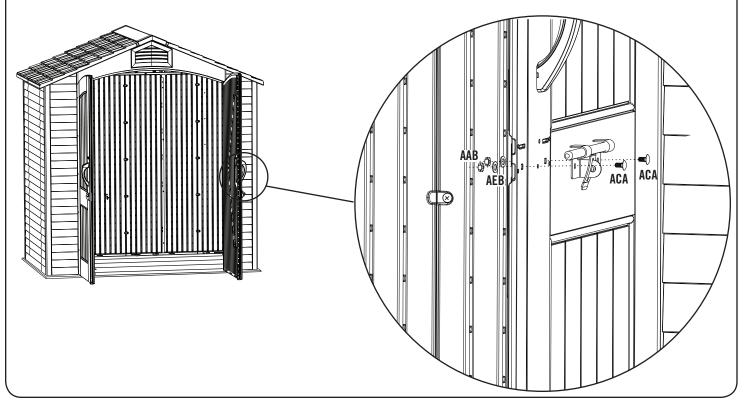

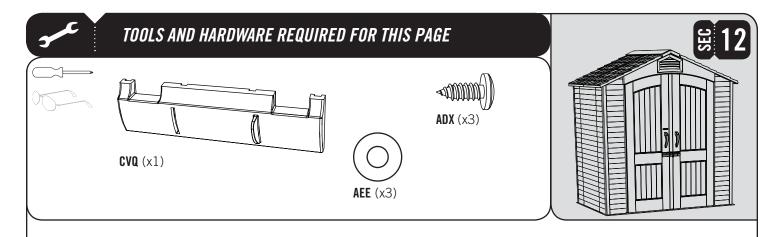



Insert the Large Right Door Latch Cover (CVQ) at an angle over the Right Door Latch Brackets as shown. Then, rotate the Cover so it's flat against the Door as shown. Secure the Large Right Door Latch Cover to the Door using three (3) #10 x 1/2" Pan-Head Screws (ADX) and three (3) #10 Flat Washers (AEE).

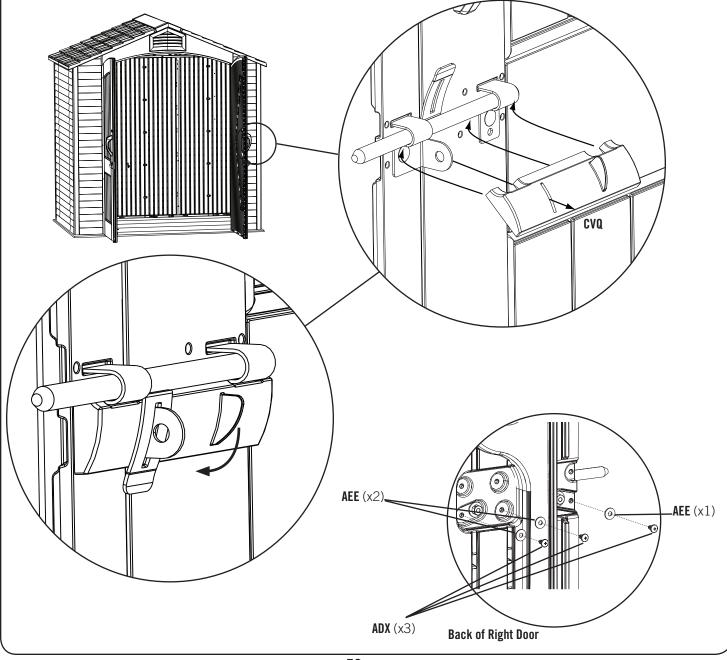

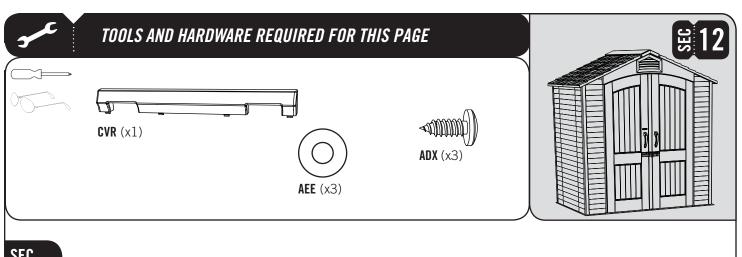



Slide the **Small Right Door Latch Cover (CVR)** down over the Right Door Latch Brackets as shown. Secure the Small Right Door Latch Cover to the Door using three (3) **#10 x 1/2" Pan-Head Screws (ADX)** and three (3) **#10 Flat Washers (AEE)**.

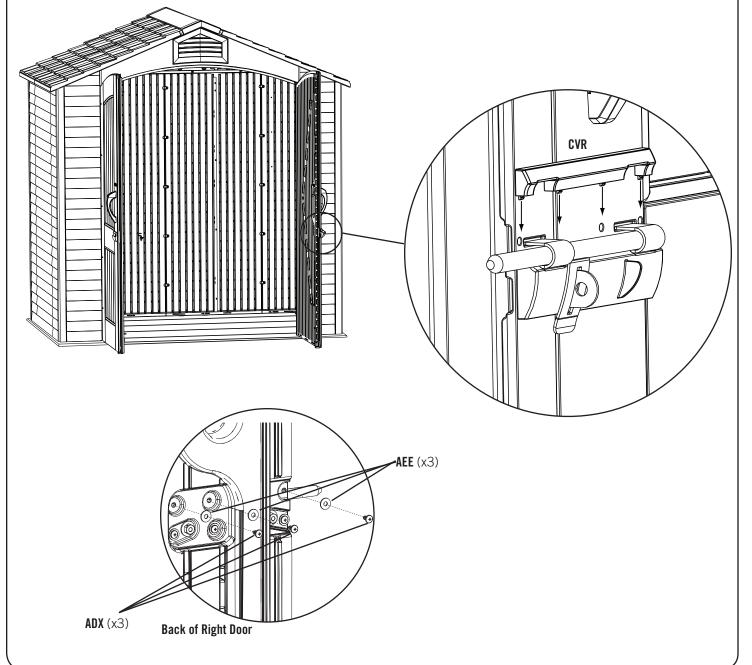

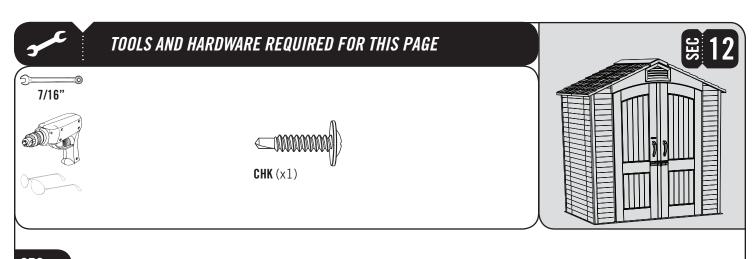



Close the Doors, and adjust the Left Door Latch Bracket up or down so the Door Latch closes easily. Once the Left Door Latch Bracket is in place, insert one (1) #10 x 3/4" Self-Drilling/Self Tapping Screw (CHK) through the small hole in the Left Door Latch Bracket, through the Left Door, and into the Square Tube inside the Door. Do not overtighten. Finally, open the Doors and tighten the Centerlock Nut (AAB) on the back of the Left Door. Finally,

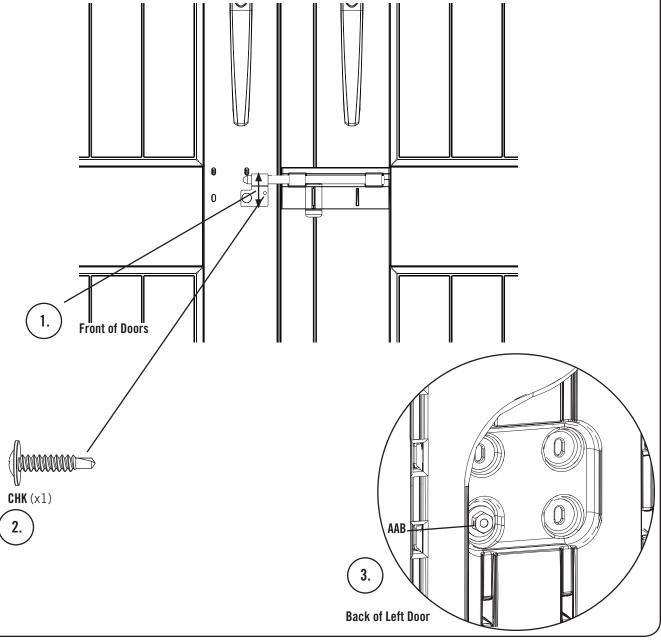

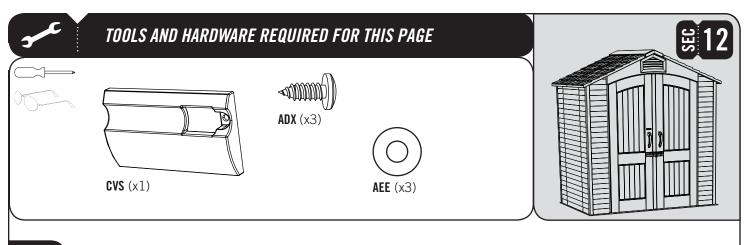

Place the **Left Door Latch Cover (CVS)** over the Left Door Latch Bracket as shown. Secure the Left Door Latch Cover to the Door using three (3) **#10 x 1/2" Pan-Head Screws (ADX)** and three (3) **#10 Flat Washers (AEE)**.

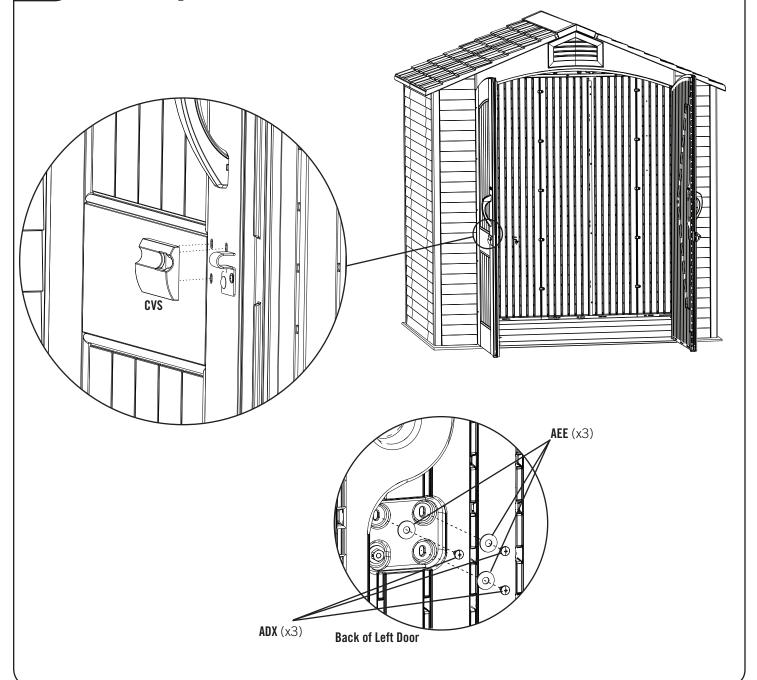

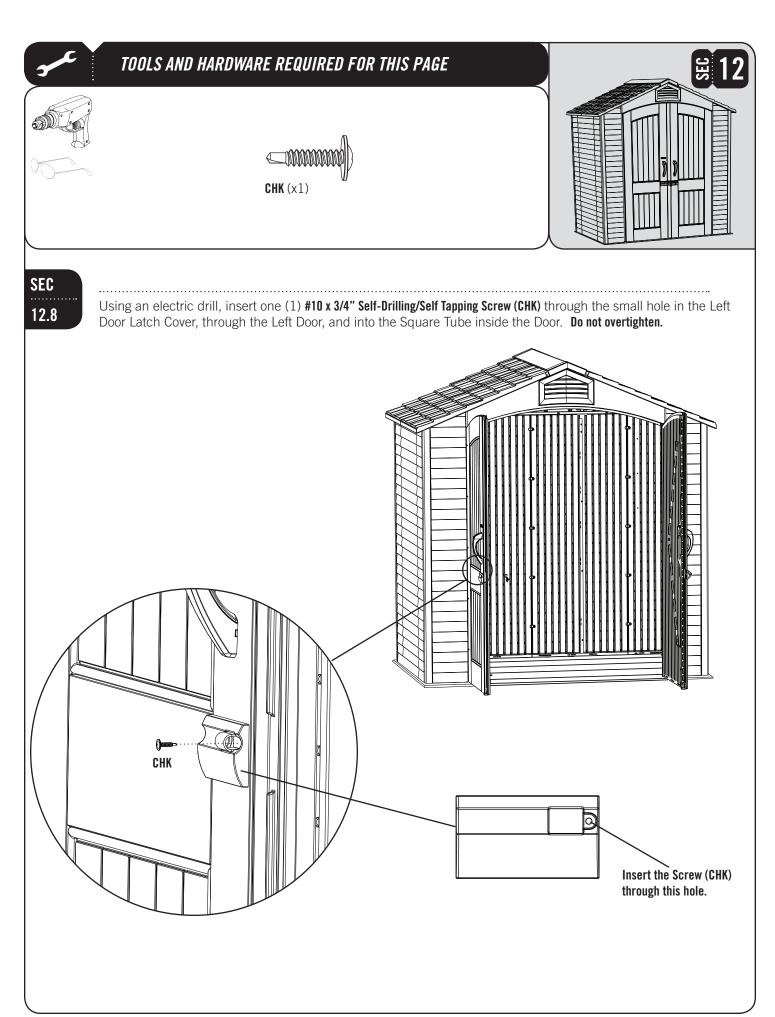

### **CLEANING & CARE**

Congratulations on your Lifetime® product purchase. By following the instructions below, your new Lifetime product should provide you with years of service and enjoyment.

#### **Cleaning and Care**

The polyethylene panels are stain- and solvent-resistant. Most stains can be removed, using a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat barrier.

#### LIFETIME OUTDOOR SHED EQUIPMENT

#### 10-YEAR LIMITED FACTORY WARRANTY

#### THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

- 1. Lifetime outdoor sheds are warranted to the original purchaser to be free from defects in material or workmanship for a period of ten years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
- 2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory or distribution center are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the shed or its components are not covered under this warranty.
- 3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the truss will void this warranty.
- 4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
- 5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
- 6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to extent permitted by Federal and state law. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

#### PLEASE INCLUDE YOUR DATED SALES RECEIPT AND PHOTOGRAPHS OF DAMAGED PARTS.

REPORT PRODUCT DEFECTS IN WRITING TO: Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or call 1-800-225-3865 M-F 7 a.m. to 5 p.m. MST.

#### REGISTER YOUR PRODUCT FOR QUICKER CUSTOMER SERVICE.

Visit www.lifetime.com or call 1-800-225-3865 to register your product today.

#### FOR INTERNATIONAL WARRANTY CLAIMS:

All warranty claims must be accompanied by a sales receipt. Report all warranty claims in writing to your regional sales support representative. Please include your dated sales receipt and photographs of damaged parts. To Identify the representative for your region — Please visit: www.lifetime.com/international





To purchase accessories or other Lifetime Products, visit us at:

# www.lifetime.com

Or call: 1-800-424-3865









